

DESPIECE SPAREPARTS


**GENERADOR INVERTER:
HY6500SEi**

MOTOR: XY188F


05/01/24

HYUNDAI
POWER PRODUCTS




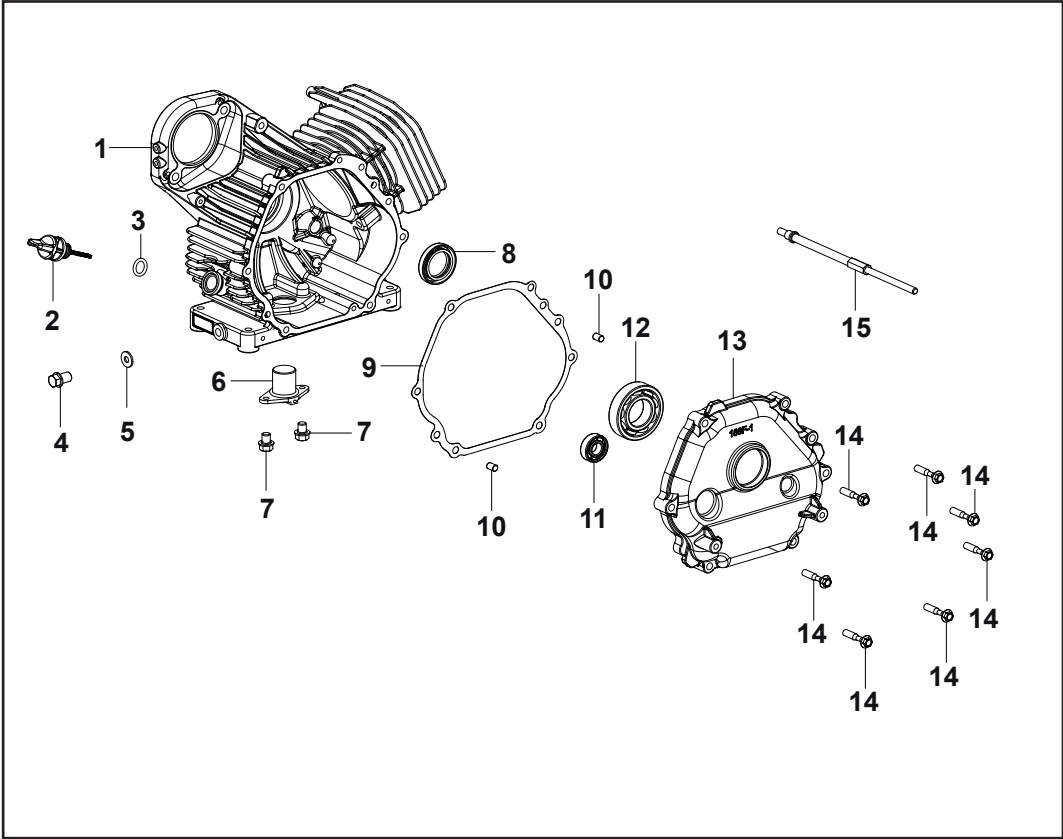


Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-XY188F-A01	BLOQUE	CRANKCASE COMPONENT
2	SP-XY188F-A02	VARILLA NIVEL ACEITE	OIL PLUG ASSEMBLY
3	SP-XY188F-A03	TORICA Ø19XØ3,55	O RING Ø19XØ3.55
4	SP-XY188F-A04	TORNILLO M12	BOLTS M12
5	SP-XY188F-A05	ARANDELA Ø12,3XØ18X2	GASKET Ø12.3XØ18X2
6	SP-XY188F-A06	SENSOR NIVEL ACEITE	OIL LEVER SENSOR
7	SP-XY188F-A07	TORNILLO M6X18	SCREW M6X18
8	SP-XY188F-A08	RETEN Ø35XØ52X8	OIL SEAL Ø35XØ52X8
9	SP-XY188F-A09	JUNTA BLOQUE MOTOR	CRANKCASE GASKET
10	SP-XY188F-A10	PASADOR Ø8X12	DOWEL PIN Ø8X12
11	SP-XY188F-A11	COJINETE 6202	BEARING 6202
12	SP-XY188F-A12	COJINETE 6207 P6	BEARING 6207 P6
13	SP-XY188F-A13	TAPA BLOQUE MOTOR	CRANKCASE CAP
14	SP-XY188F-A14	TORNILLO M8X40	HEXAGON FLANGE BOLTS M8x40
15	SP-XY188F-A15	TORNILLO DOBLE	LONG STUD

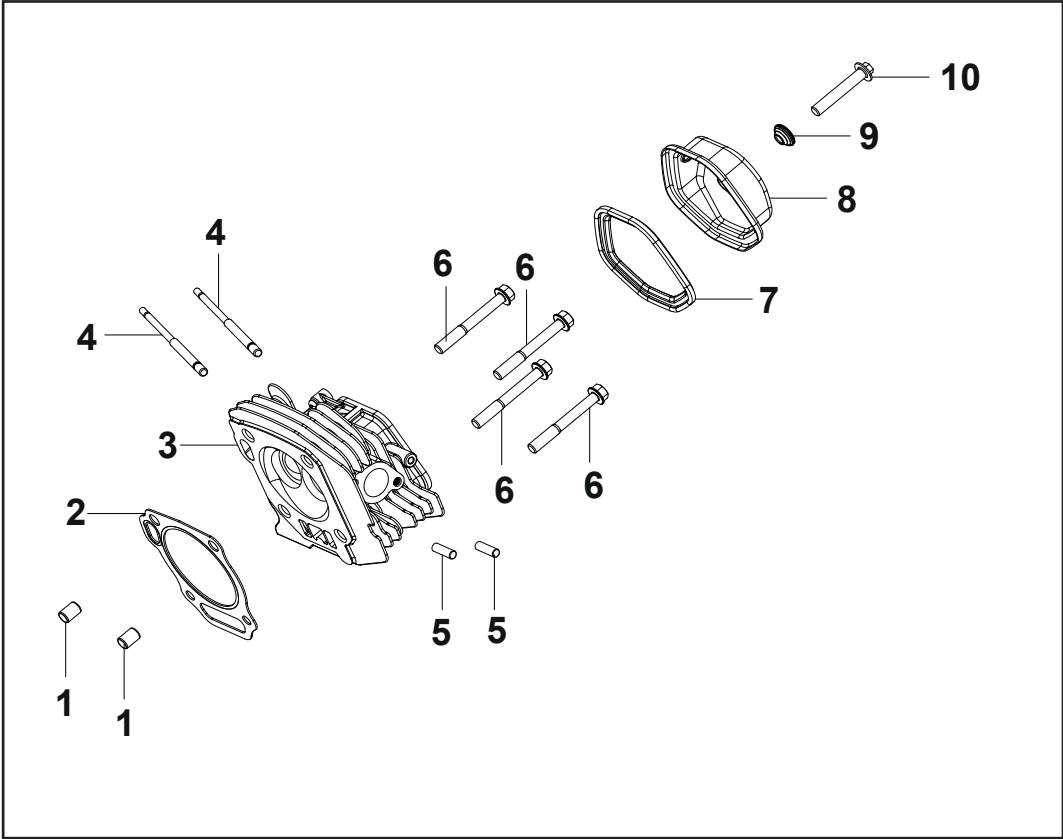


Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-XY188F-B01	PASADOR Ø812X20	DOWEL PIN Ø12X20
2	SP-XY188F-B02	JUNTA CULATA	CYLINDER HEAD GASKET
3	SP-XY188F-B03	CULATA	CYLINDER HEAD
4	SP-XY188F-B04	TORNILLO PARA CARBURADOR	BOLT FOR CARB
5	SP-XY188F-B05	ESPARRAGO M8X20	STUD BOLT M8X20
6	SP-XY188F-B06	TORNILLO M10X80	HEXAGON FLANGE BOLT M10X80
7	SP-XY188F-B07	JUNTA TAPA VALVULAS	GASKET OF RESPIRATOR
8	SP-XY188F-B08	TAPA VALVULAS	RESPIRATOR
9	SP-XY188F-B09	JUNTA TORNILLO	SCREW BOLT GASKET OF RESPIRATOR
10	SP-XY188F-B10	TORNILLO M6X56,5	BOLT M6X56,5

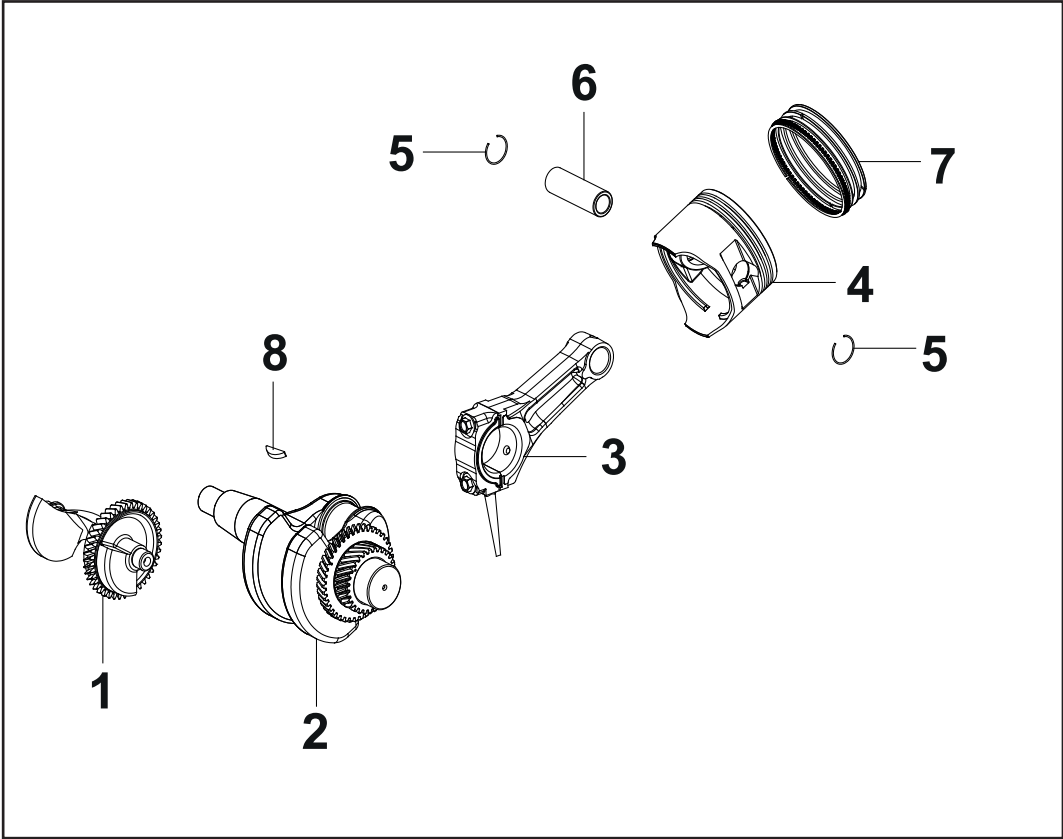

Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-XY188F-C01	EJE BALANCINES	BALANCE SHAFT
2	SP-XY188F-C02	CIGÜEÑAL	CRANKSHAFT
3	SP-XY188F-C03	BIELA PISTON	CONNECTING ROD
4	SP-XY188F-C04	PISTON	PISTION
5	SP-XY188F-C05	CLIP SUJECION BURLON	PISTON PIN CLIP
6	SP-XY188F-C06	BULON PISTON	PISTION PIN
7	SP-XY188F-C07	JUEGO SEGMENTOS	OIL RING
8	SP-XY188F-C08	CHAVETA	WOODRUFF KEY

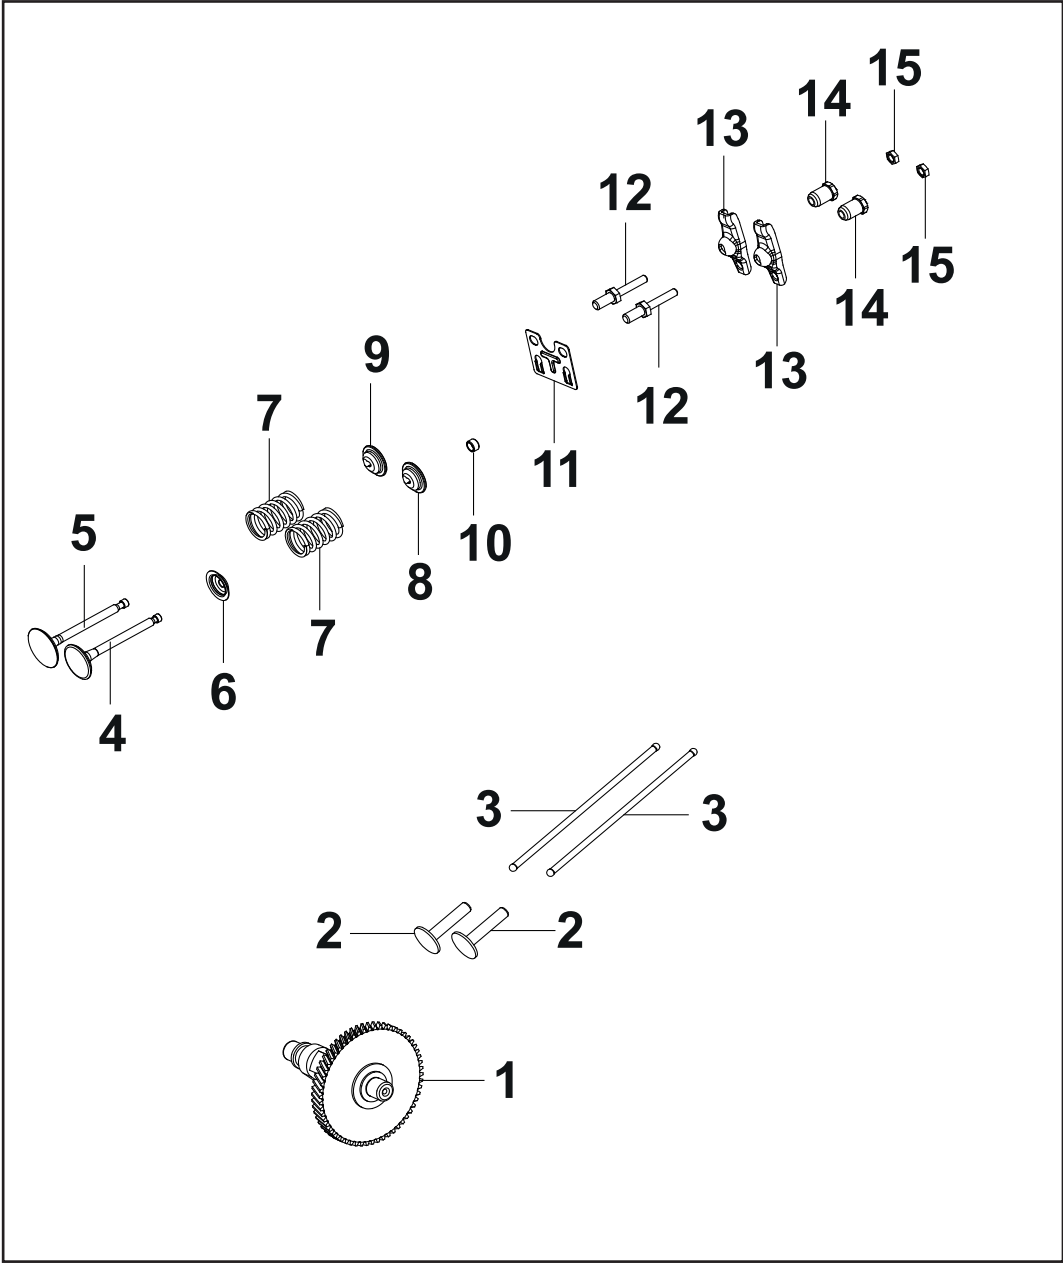


Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-XY188F-D01	ARBOL DE LEVAS	CAMSHAFT
2	SP-XY188F-D02	ASIENTO VARILLAS	TAPPET
3	SP-XY188F-D03	JUEGO VARILLAS EMPUJE	PUTTING
4	SP-XY188F-D04	VALVULA ESCAPE	EXHAUST VAVLE
5	SP-XY188F-D05	VALVULA ADMISION	INTAKE VAVLE
6	SP-XY188F-D06	RETEN MUELLE VALVULA	VAVLE SPRING RING
7	SP-XY188F-D07	MUELLE VALVULAS	VAVLE SPRING
8	SP-XY188F-D08	ASIENTO MUELLE VALVULA ESCAPE	EXHAUST VAVLE SPRING PLATE
9	SP-XY188F-D09	ASIENTO MUELLE VALVULA ADMISION	INTAKE VAVLE SPRING PLATE
10	SP-XY188F-D10	TOPE VALVULA ESCAPE	COVER OF EXHAUST
11	SP-XY188F-D11	GUIA VARILLAS	GUIDE PLATE
12	SP-XY188F-D12	TORNILLO BALANCIN	ROCKER ARM BOLT
13	SP-XY188F-D13	BALANCIN	VAVLE ROCKER ARM
14	SP-XY188F-D14	TUERCA AJUSTE BALANCINES	VAVLE ROCKER ARM NUT
15	SP-XY188F-D15	TUERCA BLOQUEO BALANCIN	VAVLE ROCKER ARM LOCKER NUT

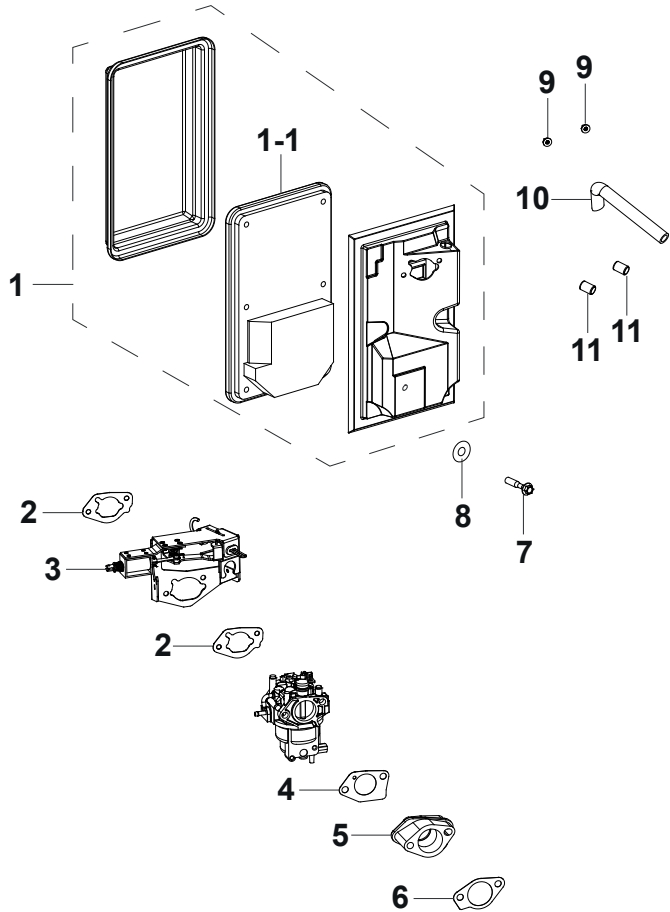

Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-XY188F-E01	FILTRO AIRE COMPLETO	AIR CLEANER ASSY
1-1	SP-XY188F-E01-1	ELEMENTO FILTRO AIRE	AIR FILTER ELEMENT
2	SP-XY188F-E02	JUNTA FILTRO AIRE	AIR CLEANER GASKET
3	SP-XY188F-E03	CEBADOR	AUTO-CHOKE HANDLE
4	SP-XY188F-E04	JUNTA CARBURADOR	CARBURATOR GASKET
5	SP-XY188F-E05	PLACA AISLANTE	INSULATION BOARD COMPONENTS
6	SP-XY188F-E06	JUNTA ADMISION	INSULATION BOARD GASKET
7	SP-XY188F-E07	TORNILLO ST4.8X19	HEXAGON FLANGE BOLTS ST4.8×19
8	SP-XY188F-E08	ARANDELA Ø5	GASKET Ø5
9	SP-XY188F-E09	TUERCA M6	HEXAGON FLANGE NUTS M6
10	SP-XY188F-E10	TUBO RESPIRADERO	BREATHER PIPE
11	SP-XY188F-E11	CASQUILLO FILTRO AIRE	AIR FILTER BUSHING
12	SP-XY188F-E12	PIEZA PLASTICO ESTARTER	AUTO-CHOKE PLASTIC PART




SP-XY188F-E12

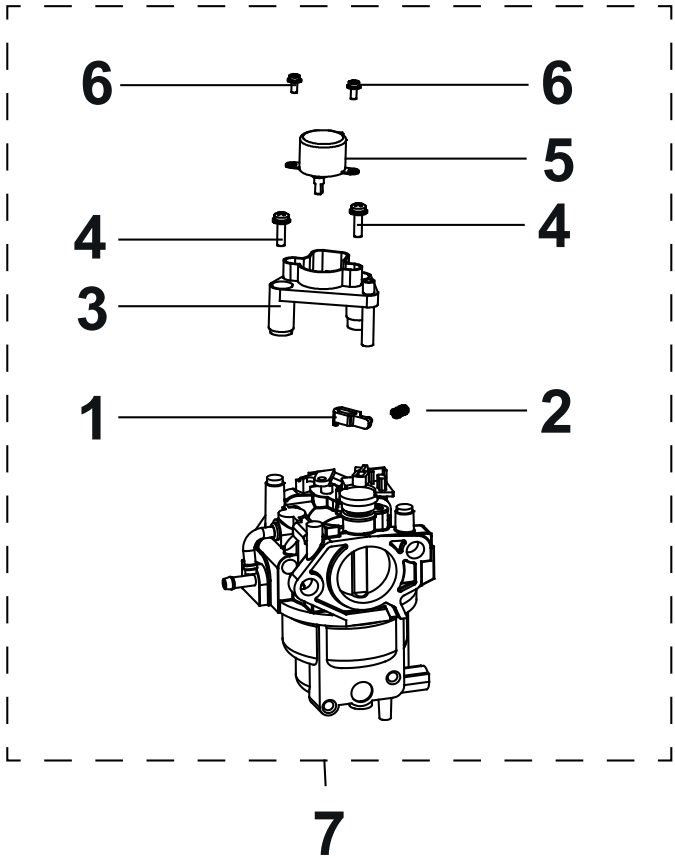


Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-6500-M01	BRAZO MOTRIZ	DRIVE ARM
2	SP-6500-M02	MUELLE BRAZO MOTRIZ	DRIVE ARM SPRING
3	SP-6500-M03	SOPORTE MOTOR CARBURADOR	STEPPER MOTOR HOLDER
4	SP-6500-M04	TORNILLO M4X16	SCREW M4×16
5	SP-6500-M05	MOTOR CARBURADOR	STEPPER MOTOR ASSY
6	SP-6500-M06	TORNILLO M3X8	SCREW M3×8
7	SP-XY188F-F01	CARBURADOR	CARBURETOR
7-1	SP-XY188F-F01-DF	CARBURADOR DUAL FUEL	DUAL FUEL CARBURETOR




SP-XY188F-F01-DF

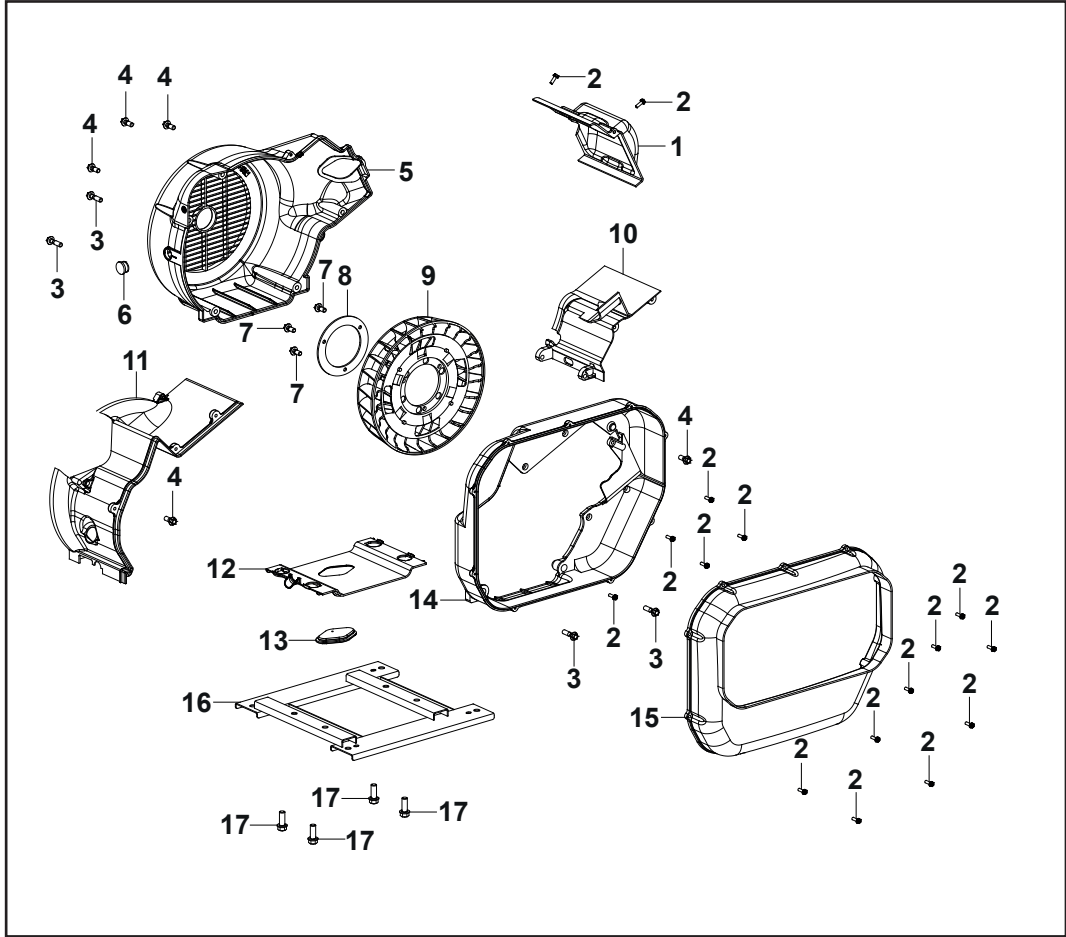


Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-6500-G01	CUBIERTA CULATA	COVER OF RESPIRATOR
2	SP-6500-G02	TORNILLO ST4.8X19	TAPPING SCREW ST4.8×19
3	SP-6500-G03	TORNILLO M6X30	HEXAGON FLANGE BOLTS M6×30
4	SP-6500-G04	TORNILLO M6X20	HEXAGON FLANGE BOLTS M6×20
5	SP-6500-G05	CARCASA VENTILADOR	FAN VOLUTE
6	SP-6500-G06	TAPON	PEEPHOLE PLUG
7	SP-6500-G07	TORNILLO M6X18	HEXAGON FLANGE BOLTS M6×18
8	SP-6500-G08	PLACA VENTILADOR	FAN PLATE
9	SP-6500-G09	VENTILADOR	COOLING FAN
10	SP-6500-G10	DEFLECTOR FRONTAL	FRONT AIR GUIDE
11	SP-6500-G11	DEFLECTOR TRASERO	BACK AIR GUIDE
12	SP-6500-G12	DEFLECTOR INFERIOR	DOWN AIR GUIDE
13	SP-6500-G13	TAPON DE GOMA	RUBBER PLUG
14	SP-6500-G14	CUBIERTA FRONTAL ESCAPE	FRONT MUFFLER COVER
15	SP-6500-G15	CUBIERTA TRASERA ESCAPE	BACK MUFFLER COVER
16	SP-6500-G16	BASE CUBIERTAS	TRAY
17	SP-6500-G17	TORNILLO M10X30	HEXAGON FLANGE BOLTS M10×30

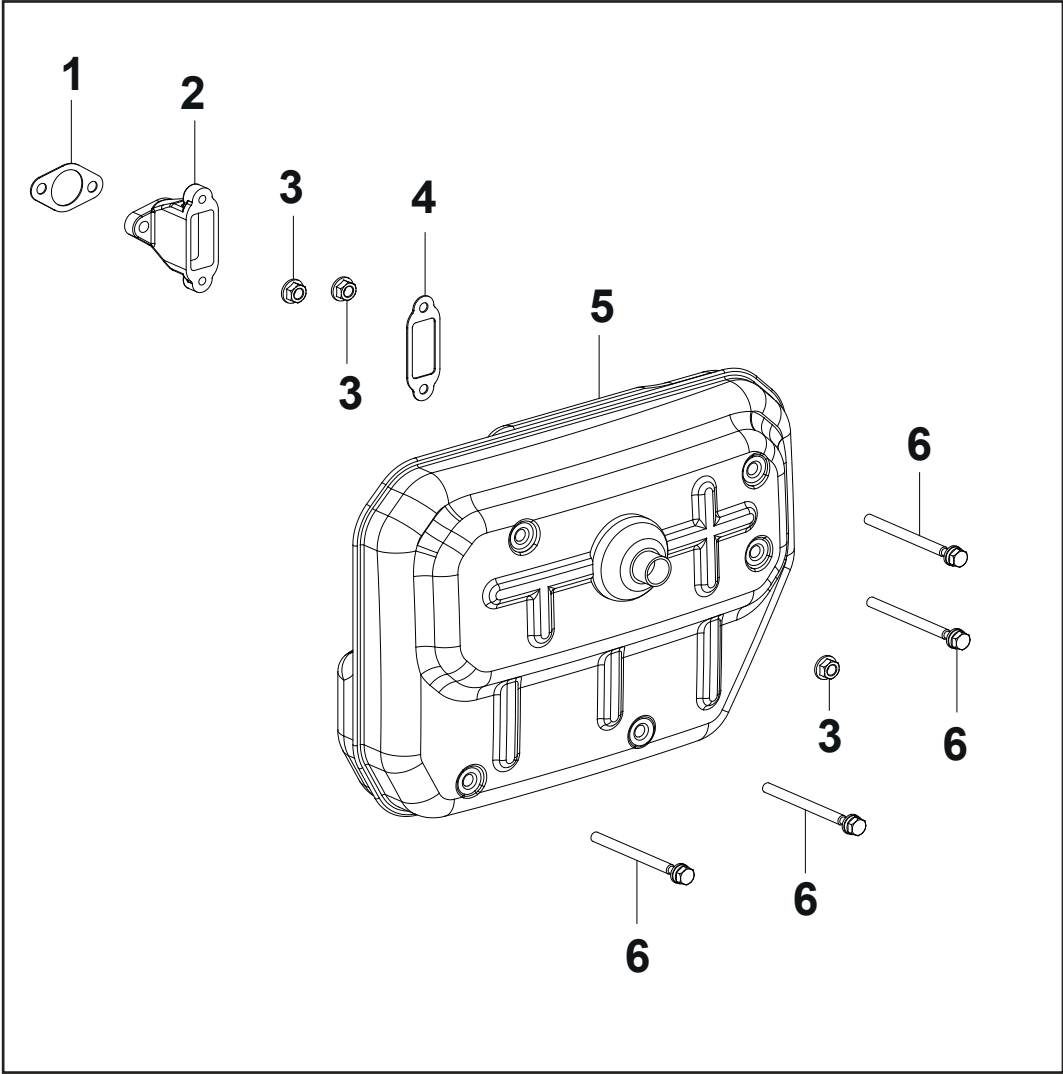


Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-6500-H01	JUNTA TUBO ESCAPE	EXHAUST PIPE GASKET
2	SP-6500-H02	TUBO ESCAPE	MUFFLER PIPE
3	SP-6500-H03	TORNILLO M8	HEXAGON FLANGE BOLTS M8
4	SP-6500-H04	JUNTA ESCAPE	MUFFLER GASKET
5	SP-6500-H05	ESCAPE	MUFFLER ASSY
6	SP-6500-H06	TORNILLO M8X105	BOLTS M8×105

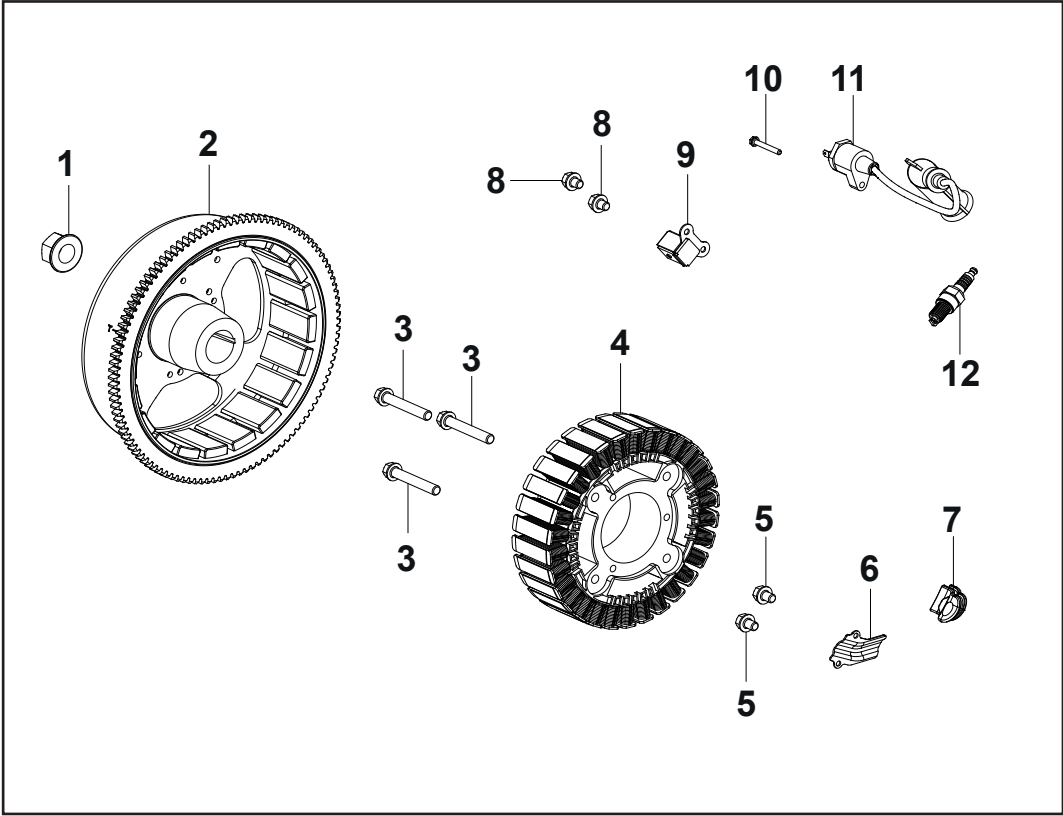


Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-6500-I01	TUERCA M20X1.5	HEXAGON FLANGE NUTS M20X1.5
2	SP-6500-I02	ROTOR	ROTOR
3	SP-6500-I03	TORNILLO M6X65	INNER HEXAGON SCREW M6×65
4	SP-6500-I04	ESTATOR	STATOR
5	SP-6500-I05	TORNILLO M5X12	HEXAGON FLANGE BOLTS M5×12
6	SP-6500-I06	ABARZADERA	CLAMP
7	SP-6500-I07	CASQUILLO	BUSHING
8	SP-6500-I08	TORNILLO M5X10	HEXAGON FLANGE BOLTS M5×10
9	SP-6500-I09	SENSOR REVOLUCIONES	REVOLUTION SENSOR
10	SP-6500-I10	TORNILLO ST4,8X30	TAPPED SCREW ST4.8×30
11	SP-XY188F-I11	BOBINA BUJIA	IGNITION COIL
12	SP-BUJIA-F6RTC	BUJIA TORCH F6RTC	SPARK PLUG TORCH F6RTC
12-1	SP-BUJIA-F7RTC	BUJIA TORCH F7RTC	SPARK PLUG TORCH F7RTC

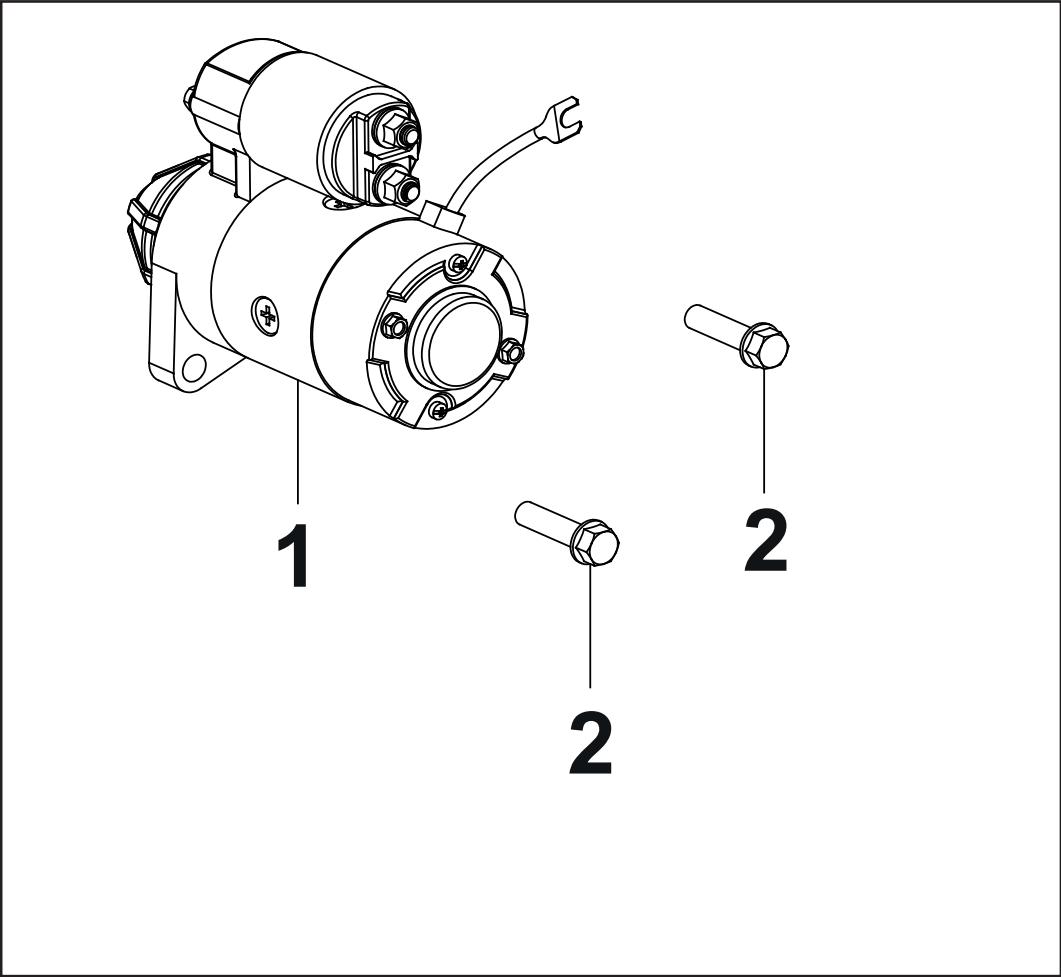


Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-XY188F-J01	MOTOR DE ARRANQUE	START MOTOR
2	SP-XY188F-J02	TORNILLO M10X30	HEXAGON FLANGE BOLTS M10×30

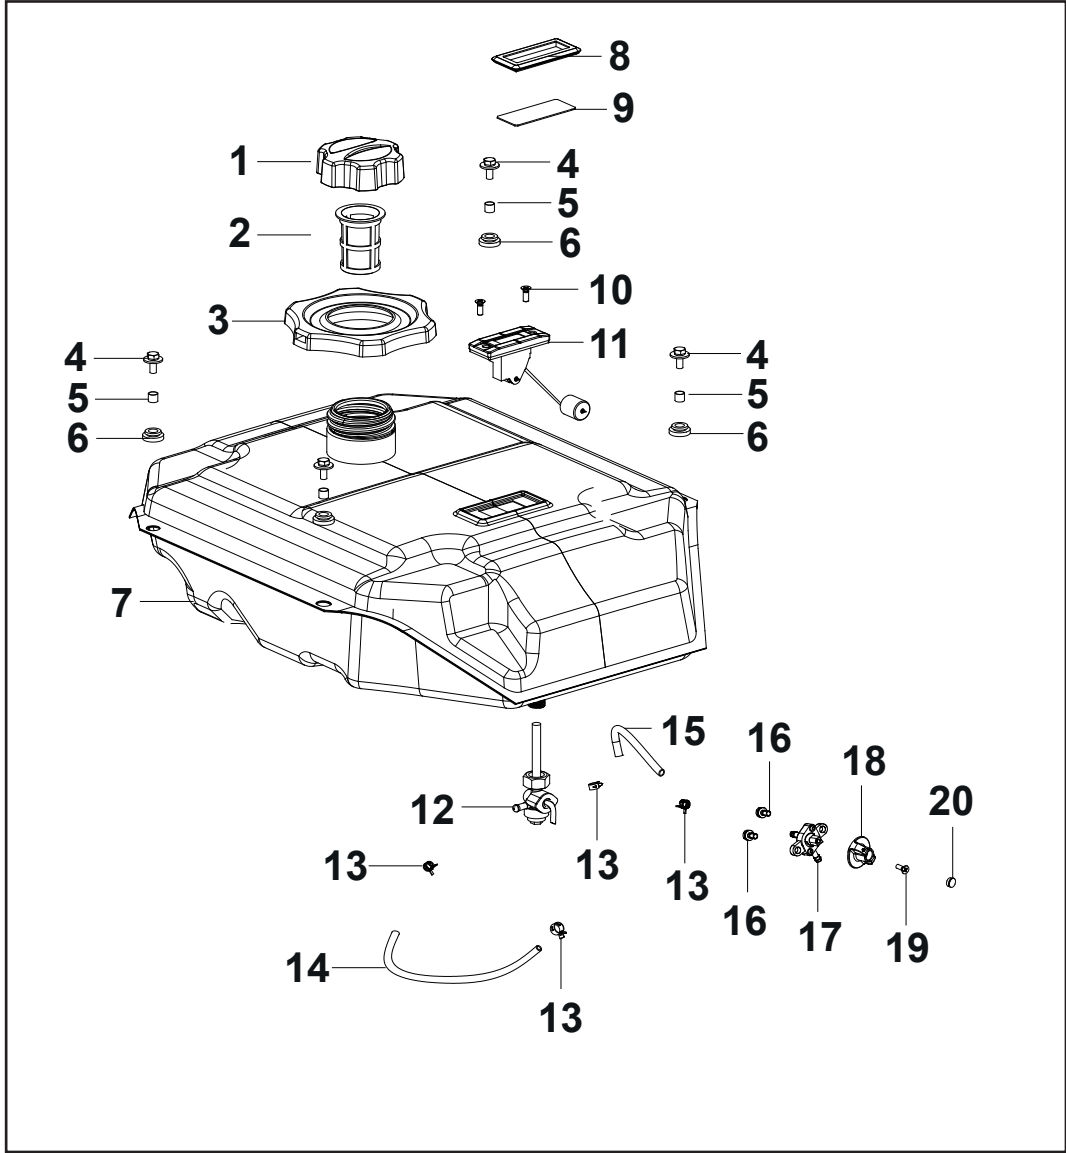


Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-6500-K01	TAPON COMBUSTIBLE	FUEL TANK CAP ASSY
2	SP-6500-K02	PRE FILTRO COMBUSTIBLE	FUEL FILTER
3	SP-6500-K03	GOMA TAPON	FUEL TANK PORT RUBBER PART
4	SP-6500-K04	TORNILLO M6X22	SCREW M6×22
5	SP-6500-K05	CASQUILLO DEPOSITO	SHOCK PAD
6	SP-6500-K06	GOMA CASQUILLO	RUBBER SHOCK PAD
7	SP-6500-K07	DEPOSITO COMBUSTIBLE	FUEL TANK
8	SP-6500-K08	GOMA INDICADOR NIVEL GASOLINA	RUBBER OF FUEL LEVEL GAUGE
9	SP-6500-K09	VENTANA NIVEL GASOLINA	WINDOW OF FUEL LEVEL GAUGE
10	SP-6500-K10	TORNILLO M5X14	CROSS HEAD SCREW M5*14
11	SP-6500-K11	INDICADOR NIVEL GASOLINA	OIL LEVEL GAUGE
12	SP-6500-K12	GRIFO COMBUSTIBLE	FUEL COCK
13	SP-6500-K13	ABRAZADERA	CLAMP
14	SP-6500-K14	TUBO COMBUSTIBLE Ø5XØ10X230	FUEL TUBE Ø5XØ10X230
15	SP-6500-K15	TUBO COMBUSTIBLE Ø5XØ10X350	FUEL TUBE Ø5XØ10X350
16	SP-6500-K16	TORNILLO ST4.8X13	SCREW ST4.8×13
17	SP-6500-K17	GRIFO COMBUSTIBLE	FUEL COCK
18	SP-6500-K18	MANILLA GRIFO COMBUSTIBLE	FUEL COCK HANDLE
19	SP-6500-K19	TORNILLO M4X14	SCREW M4X14
20	SP-6500-K20	TAPON MANILLA GRIFO COMBUSTIBLE	CAP OF FUEL COCK HANDLE

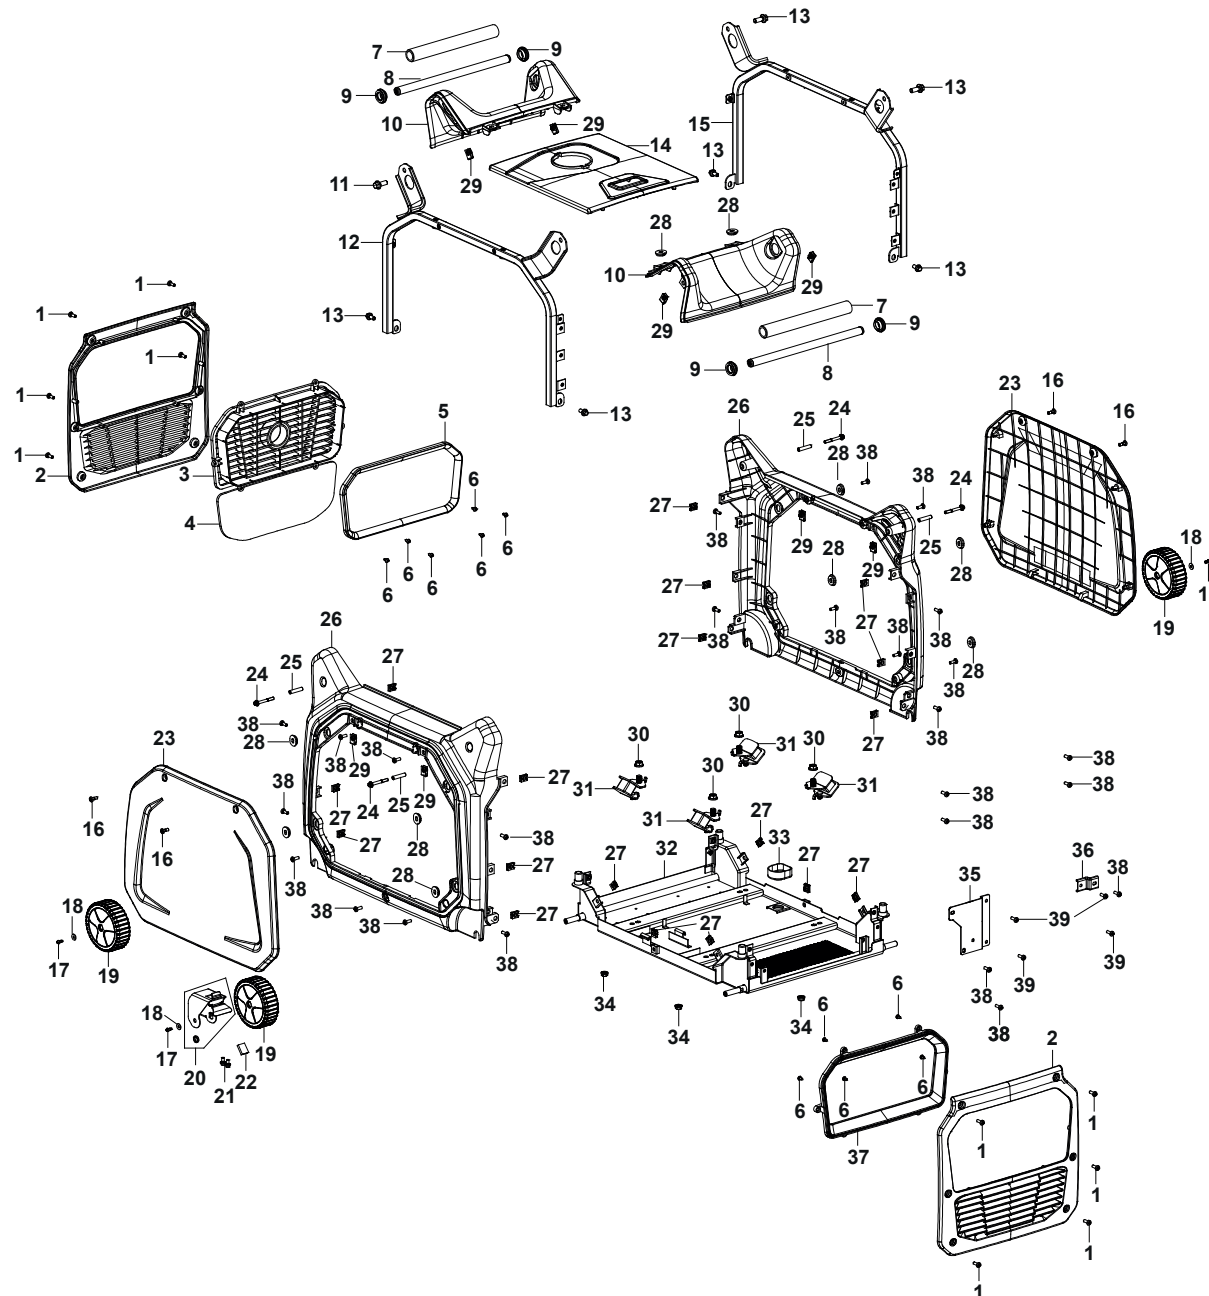


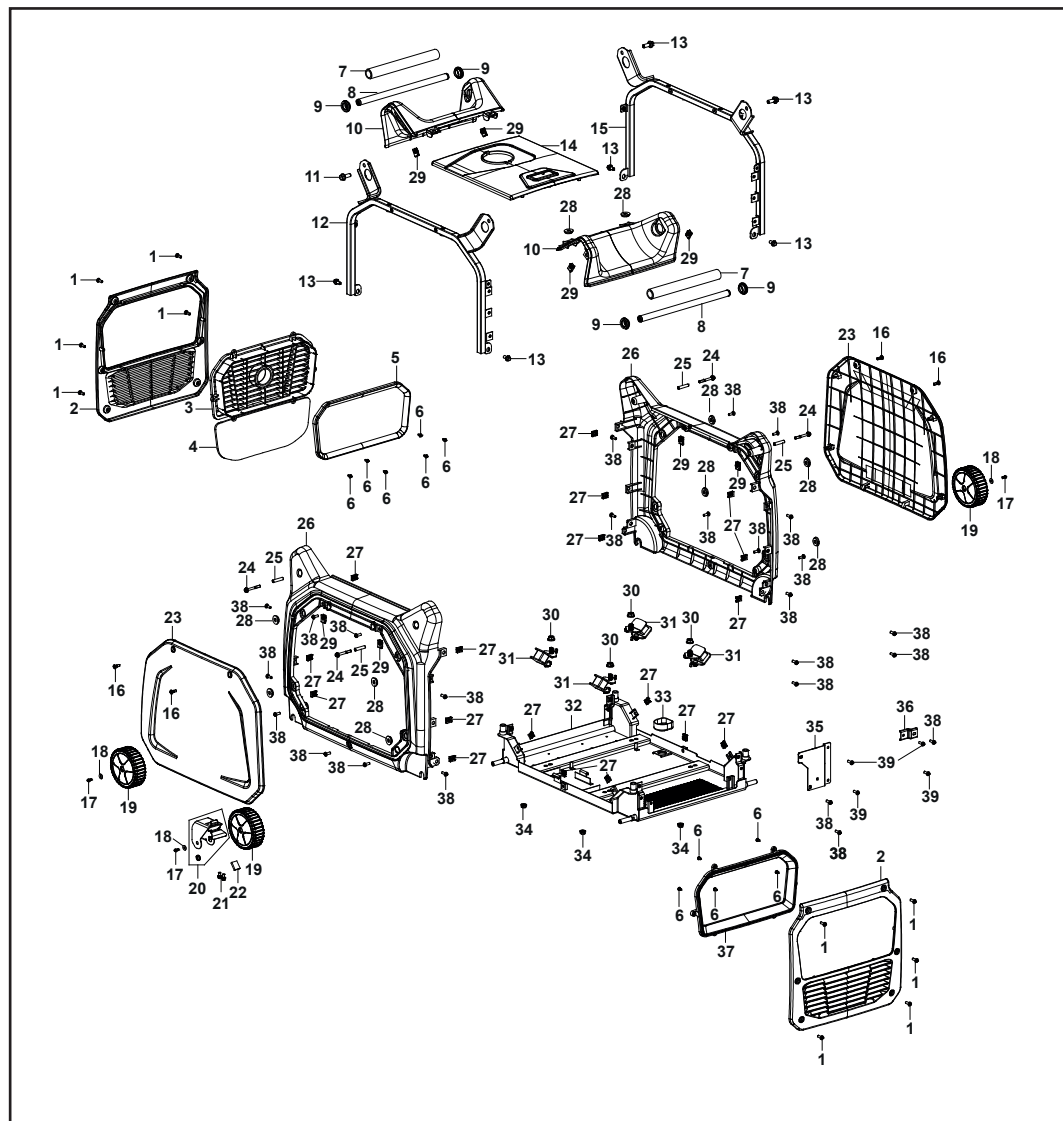



Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-6500-L01	TORNILLO M6X16	PAN HEAD SCREW M6×16
2	SP-6500-L02	TAPA TRASERA Y DELANTERA	FRONT AND BACK COVER
3	SP-6500-L03	TAPA ESCAPE	MUFFLER COVER
4	SP-6500-L04	ESPONJA FONO ABSORBENTE	SOUND-ABSORBING SPONGE
5	SP-6500-L05	JUNTA TAPA ESCAPE	MUFFLER COVER SEAL
6	SP-6500-L06	TORNILLO ST4.8X13	SCREW ST4.8×13
7	SP-6500-L07	ASA	HANDLE
8	SP-6500-L08	TUBO INTERIOR ASA	STEEL TUBE OF HANDLE
9	SP-6500-L09	GOMA ASA	RUBBER OF HANDLE
10	SP-6500-L10	SOPORTE ASA	HANDLE BOARD
11	SP-6500-L11	TORNILLO M10*25	HEXAGON FLANGE BOLTS M10*25
12	SP-6500-L12	MARCO DERECHO	RIGHT FRAMEWORK
13	SP-6500-L13	TORNILLO M8*16	HEXAGON FLANGE BOLTS M8*16
14	SP-6500-L14	TAPA SUPERIOR	UPPER COVER
15	SP-6500-L15	MARCO IZQUIERDO	LEFT FRAMEWORK
16	SP-6500-L16	TORNILLO M6X16	TAPPED SCREW M6X16
17	SP-6500-L17	TORNILLO M5X10	PAN HEAD SCREW M5X10
18	SP-6500-L18	ARANDELA GB862.2 Ø5	GASKET GB862.2 $\varnothing$ 5
19	SP-6500-L19	RUEDAS 5"	WHEELS 5"
20	SP-6500-L20	FRENO RUEDAS	BRAKE PART
21	SP-6500-L21	TORNILLO M6X12	HEXAGON FLANGE BOLTS M6X12
22	SP-6500-L22	GOMA FRENO	BRAKE RUBBER
23	SP-6500-L23-BD	CUBIERTA LATERAL B+D	SIDE COVER B+D
24	SP-6500-L24	TORNILLO M6X50	HEXAGON FLANGE BOLTS M6X50
25	SP-6500-L25	CASQUILLO	BUSHING
26	SP-6500-L26	CUBIERTA LATERAL	COVER OF SHELL
27	SP-6500-L27	GRAPA ROSCADA	CLIP NUT
28	SP-6500-L28	GOMAS FIJACION	RUBBER CLIP
29	SP-6500-L29	GRAPA CLIP	ANTI-OFF CLIP NUT
30	SP-6500-L30	TUERCA M10	HEXAGON FLANGE BOLTS M10
31	SP-6500-L31	SILENT-BLOCK	SHOCK PAD
32	SP-6500-L32	CHASIS	CHASSIS
33	SP-6500-L33	EMBUDO ACEITE	OIL FUNNEL
34	SP-6500-L34	TUERCA M8	FLANGE NUT M8
35	SP-6500-L35	SOPORTE PLACA INVERTER	FIXED PLATE OF INVERTER
36	SP-6500-L36	FIJADOR PLACA INVERTER	INVERTER JOLDER
37	SP-6500-L37-BD	JUNTA PANEL CONTROL B+D	PANEL BOX B+D
38	SP-6500-L38	TORNILLO M6X16	HEXAGON FLANGE BOLTS M6×16
39	SP-6500-L39	TORNILLO M5X14	HEXAGON FLANGE BOLTS M5×14

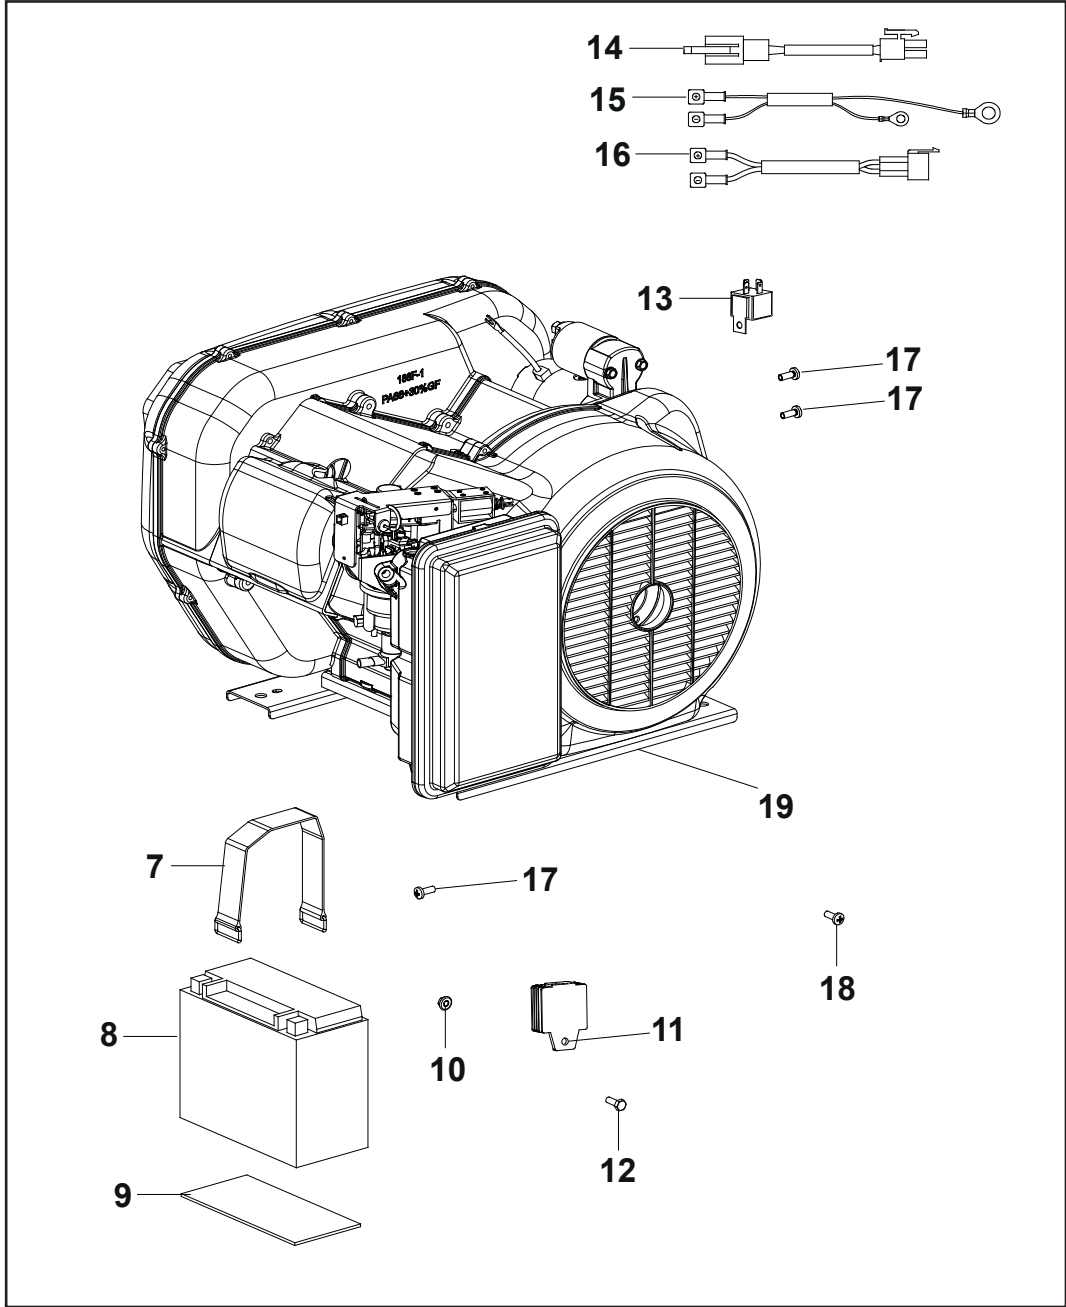

Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
7	SP-6500-M07	GOMA FIJACION BATERIA	BATTERY LAYER
8	SP-BAT-18AH-XY	BATERIA 12V18A	BATTERY 12V18AH
9	SP-6500-M09	GOMA BASE BATERIA	GASKET OF BATTERY
10	SP-6500-M10	TUERCA M6	FLANGE NUT M6
11	SP-6500-M11	REGULADOR CARGA BATERIA	BATTERY REGULATOR
12	SP-6500-M12	TORNILLO M6X16	FLANGE BOLT M6×16
13	SP-6500-M13	RELE	RELAY
14	SP-6500-M14	CABLE MOTOR CARBURADOR	STEPPER MOTOR CORD
15	SP-6500-M15	CABLE BATERIA	BATTERY WIRE
16	SP-6500-M16	CABLE PLACA INVERTER	INVERTER OUTPUT WIRE
17	SP-6500-M17	TORNILLO M6X12	HEXAGON FLANGE BOLTS M6×12
18	SP-6500-M18	TORNILLO M5X14	HEXAGON FLANGE BOLTS M5×14
19	IT-XY188F	MOTOR INVERTER XY	INVERTER ENGINE XY

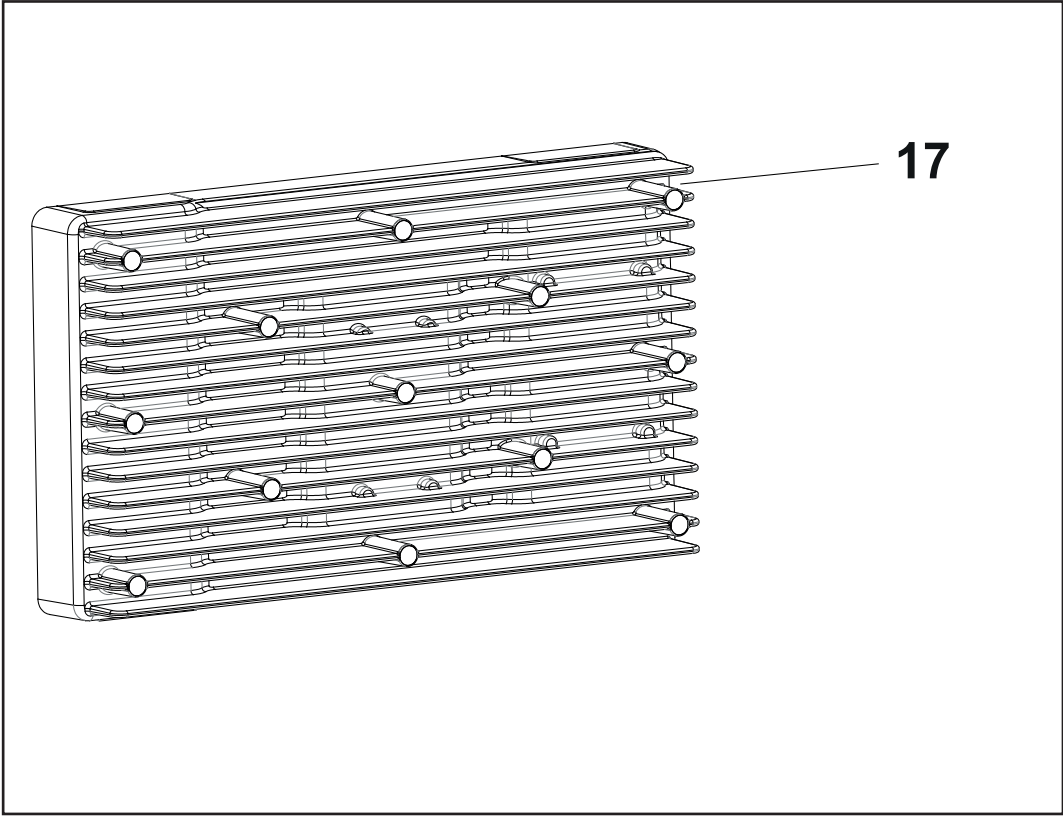


Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-6500-N01	PLACA INVERTER	INVERTER

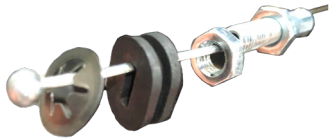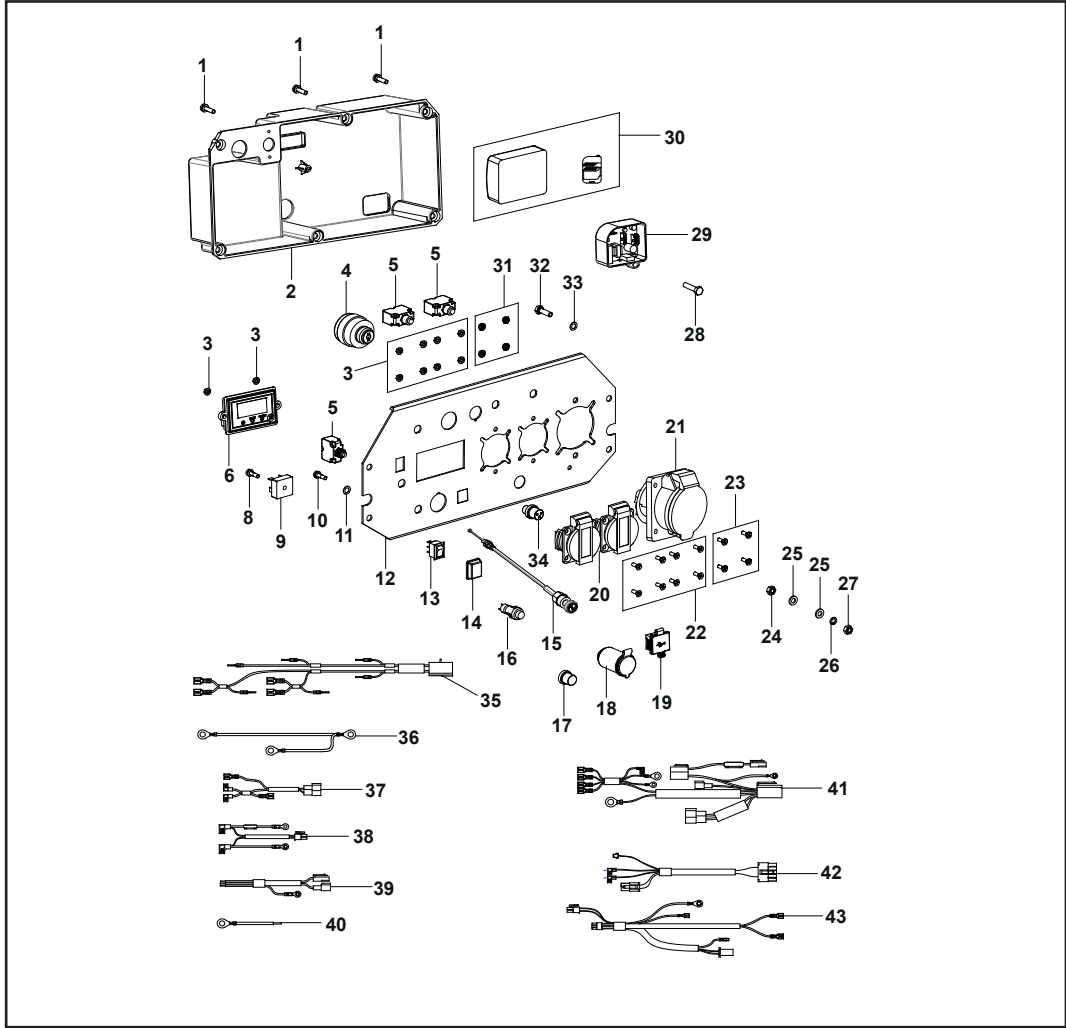

SP-6500-015

Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-6500-001	TORNILLO M5X10	SCREW M5×10
2	SP-6500-002	CAJA PANEL CONTROL	PANEL BOX
3	SP-6500-003	TUERCA M4	FLANGE NUT M4
4	SP-6500-004	BOMBIN LLAVE	ELECTRIC STARTER
5	SP-PC-OVER-16A	PROTECTOR SOBRECARGA 16A CC	OVERLOAD PROTECTOR 16A
6	SP-6500-006	PANTALLA LED	MULTIFUNCTION DIGITAL DISPLAY
7	SP-PC-OVER-6A	PROTECTOR SOBRECARGA CC	OVERLOAD PROTECTOR 6A
8	SP-6500-008	TORNILLO M5X16	SCREW M5×16
9	SP-PC-RECTI-3502	RECTIFICADOR KBPC3502	RECTIFIER KBPC3502
10	SP-6500-010	TORNILLO M5X8	SCREW M5×8
11	SP-6500-011	ARANDELA BLOQUEO Ø5	LOCK GASKET 5
12	SP-6500-012-BD	PLACA PANEL CONTROL B+D	CONTROL PANEL PLATE B+D
13	SP-PC-SWITCH-C	INTERRUPTOR ON/OFF NEGRO	BOAT SWITCH
14	SP-PC-SWITCH-CUBIERTA	PROTECTOR LLUVIA INTERRUPTOR	WATER-PROOF CAP OF BOAT SWITCH
15	SP-6500-015	CABLE ESTARTER	THROTTLE ROPE ASSEMBLY
16	SP-6500-016	BOTON RESET	RESET SWITCH
17	SP-PC-OVER-PROTEC	PROTECTOR LLUVIA SOBRECARGA	WATER-PROOF CAP OF OVERLOAD PROTECTOR
18	SP-6500-018	TOMA MECHERO	CIGAR LIGHTER SOCKET
19	SP-6500-019	TOMA DOBLE USB 5V 1A/2,1A	5V 1A/2.1A DOUBLE USB SOCKET
20	SP-PC-BASE-SCH-16A-IP54	BASE ENCHUFE SCHUKO 16A IP54 230V	OPEAN SOCKET IP54
21	SP-PC-BASE-SCH-32A-IP44	BASE ENCHUFE SCHUKO 32A 3P IP44 230V	INDUSTRIAL SOCKET 32A
22	SP-6500-022	TORNILLO M5X16	SCREW M5×16
23	SP-6500-023	TORNILLO M5X18	SCREW M5×18
24	SP-6500-024	TUERCA M6	FLANGE NUT M6
25	SP-6500-025	ARANDELA Ø5	FLAT WASHER 5
26	SP-6500-026	GLOVER Ø6	SPRING WASHER 6
27	SP-6500-027	TUERCA M6	FLANGE NUT M6
28	SP-6500-028	TORNILLO ST4.8X16	SCREW ST4.8×16
29	SP-6500-029	CONTROL BOX	IGNITION CONTROLLER
30	SP-6500-030	CONTROL REMOTO MODULO ATS	REMOTE CONTROL MODULE OF ATS
31	SP-6500-031	TUERCA M5	FLANGE NUT M5
32	SP-6500-032	TORNILLO M6X20	SCREW M6×20
33	SP-6500-033	GLOVER Ø6	LOCK GASKET 6
34	SP-PC-ATS-3	BASE CONECTOR ATS	ATS CONNECTOR
35	SP-6500-035	CABLES CORRIENTE ALTERNA (UE)	AC SOCKET WIRE(EU)
36	SP-6500-036	CABLE TIERRA	PANEL EARTH WIRE
37	SP-6500-037	CABLE ENTRADA ENCHUFE DC	DC SOCKET INPUT WIRE
38	SP-6500-038	CABLE ENCHUFE DC	DC SOCKET WIRE

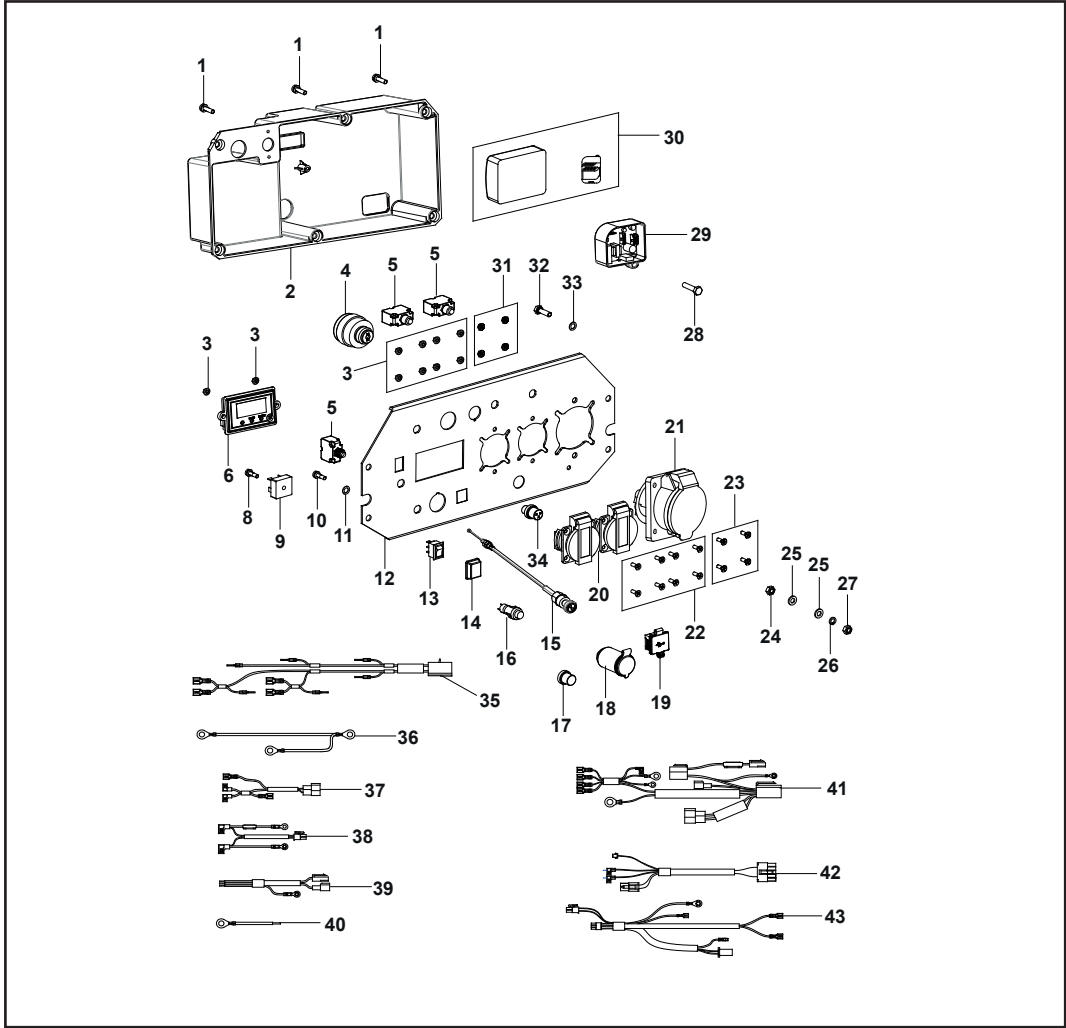

Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
39	SP-6500-039	CABLE ATS	ATS WIRE
40	SP-6500-040	CABLE ENCHUFE TIERRA	SOCKET EARTH WIRE
41	SP-6500-041	CABLE GENERADOR	GENERATOR WIRE
42	SP-6500-042	CABLE INVERTER	INVERTER WIRE
43	SP-6500-043	CABLE CONTROLADOR ENCENDIDO	IGNITION CONTROLLER WIRE
44	SP-6500-044	PANEL DE CONTROL COMPLETO	COMPLETE CONTROL PANEL
45	AC-LPG	KIT DE GAS	GAS KIT



AC-LPG