

This guide is meant to serve as a quick reference for operating your Hyundai inverter generator. It is for convenience, and not intended to replace the information found in the product manual provided. **USE OUTDOORS ONLY!**

- Generators produce carbon monoxide: a poisonous, colourless, odourless gas that can cause death or serious injury.
- Petrol is highly flammable, always handle with extreme care and in a well ventilated area.
- Make sure the electrical rating of your device(s) does not exceed the electrical rating of this generator.
- Always operate on a level surface.

**You Tube HYUNDAI POWER EQUIPMENT**  
**OUT OF THE BOX & ASSEMBLY VIDEO AVAILABLE**

### This product includes:

- 12v Charger Leads
- Oil Jug
- Double Ended Screwdriver
- Spark Plug Spanner
- 500ml Oil
- Caravan Adapter Fly Lead
- Manual




NOTICE: Our range of inverter generators are supplied with a 'floating earth'. Please see the user manual for more details. Check that you have all of the included items listed above. If any are missing or damaged, call 01646 687 880 or email [info@hyundaipowerequipment.co.uk](mailto:info@hyundaipowerequipment.co.uk).

### ASSEMBLY:



### Adding Oil:

Place on level ground, loosen the side screws on the cover (1). With the screws out, firmly pull the cover to release it from the locating lugs. Locate the oil filler cap and remove it (2).

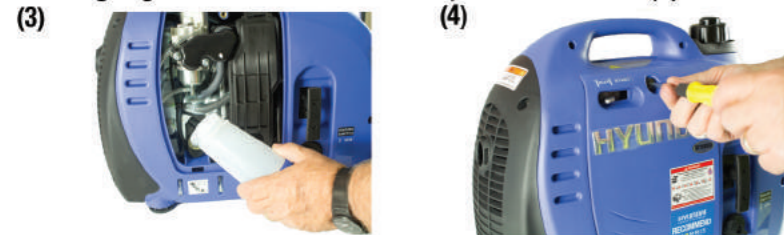


Fill engine with SAE15W40 engine oil to top of filler neck. DO NOT OVERFILL (3).

Refit the oil filler cap and the side cover (4).




### Adding Petrol & Setting Engine Switch:


Turn the fuel cap anti-clockwise (5) and remove (6).

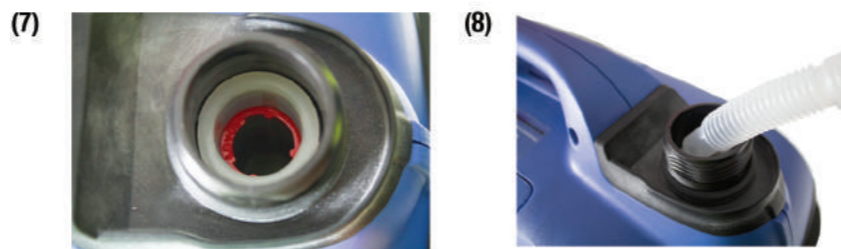

With the fuel cap removed (7), carefully pour the unleaded petrol into the fuel tank, do not overfill, leave room for expansion-25mm at top of tank (8). When the fuel tank is full, retighten the fuel cap.

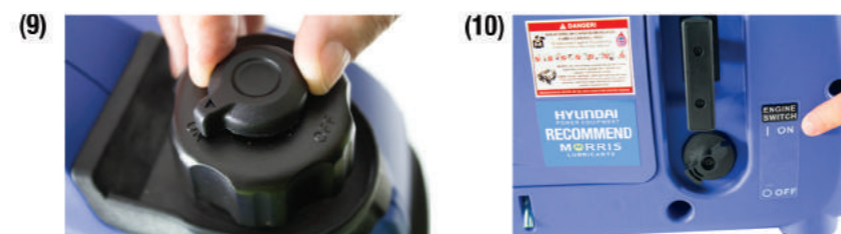


Turn fuel cap air vent to ON position (9). Turn ON/OFF switch to ON position (10).

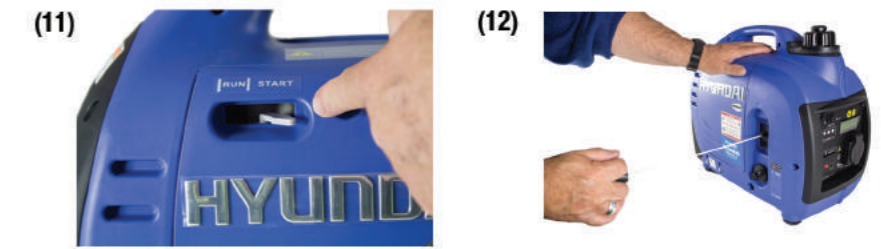


### Starting Procedure:


Move the choke lever to the "START" position (move across for HY1000Si model or pull out on HY2000Si) (11). Pull gently on the starter grip until you feel resistance, then pull it briskly to start the generator (12). Do not pull the recoil cord too hard as this could cause damage to the recoil assembly.

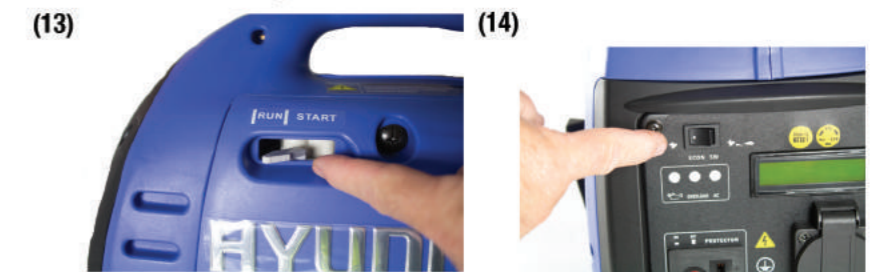

Once the engine has run for 5-20 seconds, slowly move the choke lever to the "RUN" position (move across for HY1000Si, push in for HY2000Si) (13). Before plugging in any heavy load appliances make sure the economy switch is set to the "OFF" position (14). Under normal conditions place the economy switch in the "ON" position.

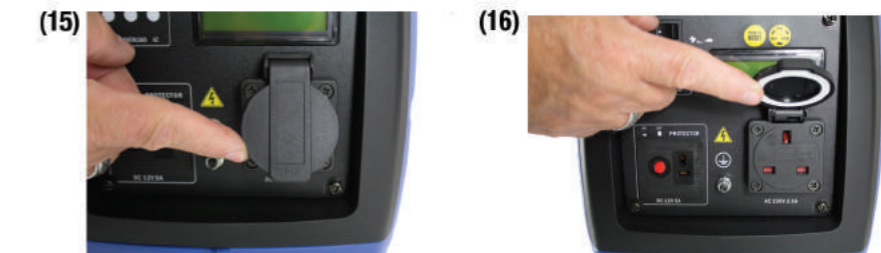

When you are ready to plug in your appliance, locate the plug socket cover at the front of the generator (15) and then lift it up to reveal the plug socket (16).

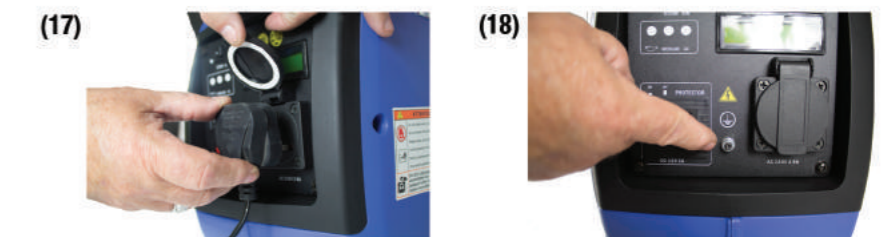

Make sure that all of the switches on your electrical devices are turned off, then insert the plug into the plug socket (17). Refer to the user manual for guidance on grounding your generator (18). We would always recommend using an earth spike. Before stopping your generator, allow to run without electrical load for 1 minute.

T: 01646 687 880  
E: [info@hyundaipowerequipment.co.uk](mailto:info@hyundaipowerequipment.co.uk)  
[www.hyundaipowerequipment.co.uk](http://www.hyundaipowerequipment.co.uk)

PLEASED WITH YOUR PURCHASE? FOR A CHANCE TO WIN A £500 HYUNDAI GIFT VOUCHER LEAVE A PRODUCT REVIEW (see leaflet within box or visit [www.genpower.co.uk/rewards](http://www.genpower.co.uk/rewards)).