 


Wind Turbine Generator

USER'S MANUAL



Company profile

Our company is a high-tech corporation which has formed a system that incorporates research, production and sales. Possessing many professional technicians, advanced equipment and detection methods, our company has formed a service system that combines design, manufacture, installment, the debugging, marketing and after-sale service. Moreover, our products are warmly welcomed and praised all around the world, especially in the United States, France, Canada, Norway, Australia and many other countries.

The wind turbine series that we have developed have an independent power supply system, which enable to run under any kinds of weather without any need to be maintained.

Distinguished Users:

We are very glad that you choose this company's products and feel sure that you will find great convenience that our products bring to you and experience the joy of promoting the policy of “low carbon and environmental protection”.

Please do not forget to read the “User Installation Manual” before you open the package of the product.

Catalogue:

Part1. The Safety Warning and the Attention -----	3
Part2. Prodcut Descripition-----	5
Part3. Tower and Accessories Production-----	6
Part4. The Wind Turbine Installation Steps-----	8
Part5. The Connection between Transmission Line and the Controller-----	10
Part6. The Maintenance and Attention in Operation-----	11
Part7. Packing list-----	12
Part8. Quality Guarantee-----	13

Part1. The Safety Warning and the Attention



Attention: For the correct installation and use of this equipment, please read the safety warning and attention carefully before using it and strictly follow the instruction.

Basic requirements:

- Do not disassemble the equipment by yourself. Please contact the specified maintenance department when the equipment is out of order.
- Without any authority, any company or individual mustn't change the equipment structure, the safety and performance design .

Assembly Requirements:

1. Before the assembly of the wind generator or in the process of maintenance, please be sure to read the manual first..
- 2.Please don't install the wind turbines in rainy days or when the wind scale is at Level 4 or above.
3. After dismantling the package, you are proposed to short the three leads of the wind turbines (the exposed copper parts should be screwed together).
4. Before the installation of the wind turbine, lightning grounding must be prepared. You can arrange the facilities according to national standards, or you may your own idea to arrange them according to the local environment and soil condition. Table 1 is for reference.
- 5.When assembling the Wind turbine, all the parts should be fixed according to the parameters in table 1.

Table 1

Serial number	Fasteners name	Type and specification	quantity	Nuts tightening torque (cow. Meters)	remarks	Executive standard
1	Flange bolts	M12*55	4		galvanized	
2	Flat gasket	D12.2	4		galvanized	
3	Elastic gasket	D12.2	4		galvanized	
4	nut	M12	4	not less than 58	galvanized	
5	Stainless steel flange bolts	M6*40	6		galvanized	
6	Stainless steel against pine nuts	M6*40	6	not less than 13.6	one-time use	
7	Stainless steel against pine blind nut	M16	1	not less than 68	one-time use	

6. Before the connection between the wind turbine base and the bracket flange, please link the three leads of the wind turbine to the three leads of the bracket accordingly. When using the hinge method, every pair of wires should be no less than 30mm in length and be wrapped with Acetate cloth tape for three plies. Then please throw on glass paint tube. With this method, please connect the three pairs of wires (attention: the joint of the wires can't bear the weight of the tower leads directly, so it must be 100mm away from the joint and be fastened with rubber belt, and then stuffed into the supporting stand of the steel pipe. After that, it can be connected with the flange.)

7. Before hoisting the wind turbines, the end of the tower lead should be cut away the insulating layer for 10mm or so. Then screw the three exposed leads stubs (shot circuit) together.

8. During the installation, it is prohibited to revolve the rotor blades roughly (the ends of wind turbine leads or the tower leads are short-circuited at this moment). Only after all the installation and the examination is finished and the security of the erection crew is guaranteed, it is allowed to dismantle the terminal short circuit and be connected with the charger and battery to test the function.

·If you don't follow the above instruction when assembling and installing the wind turbines, we are sorry that any problem or failure being generated here will not be covered.

2. Prodcut Description

1. Starting with low speed; high wind energy utilization; beautiful appearance; low vibration on operation.
2. Being installed by human design and easy for installation, maintenance and repair.
3. Being molded through precise injection with new process, together with the optimized design of aerodynamic contour and structure, our wind turbine blades have such advantages: high utilization of wind energy which contributes to the annual energy output.
4. Our generators, adopting patented permanent magnet rotor alternator, with a special kind of stator design, efficiently decrease resistance torque of the generators. Meanwhile, it makes the wind turbines match the generators quite well and increase the reliability of their operation.

5. technical parameters

model name	100S	200S	300S	400S
Rated power	100W	200W	300W	400W
Maximum power	130W	220W	310W	410W
Nominal voltage	12/24V	12/24V	12/24V	12/24V
Start-up wind speed	2.0m/s	2.0m/s	2.0m/s	2.0m/s
Rated wind speed	10m/s	11.5m/s	13m/s	13m/s
Working speed	2.5~25m/s	2.5~25m/s	2.5~25m/S	2.5~25m/S
Safe speed	55m/s	55m/s	50m/S	50m/S
Host net	6.0Kg	6.2Kg	6.5Kg	6.8Kg
Wind wheel diameter	1.15m	1.25m	1.35m	1.4m
Leaf number	3/5			
Blade material	Nylon fiber			
generator	Permanent magnet synchronous generator with three-phase alternating current			
Controller system	Electromagnetic/wind turbine hemi lateral			
Speed way	Automatic adjustment of wind angle			
Working temperature	-40°C~80°C			
Tower type	Guyed tower			

Part 3.Tower and Accessories Production

1. In terms of this type of wind turbine in our company , its flange base is installed on the barrel-type tower whose the iron pipe OD is 75mm and wall thickness is 4.5 mm.
2. Being the main body of barrel-type tower , the iron pipe's length can be adjusted according to the wind and environment of the place where the user is going to install the wind turbines.
3. Tower accessories include (1) the production of the upper tower. (2) The cable group. (3) Tightening line device. (4) Anchor. (5) Line hook. (6) Base pier. (7) Anti-tarnish, anticorrosive, surface coating materials.

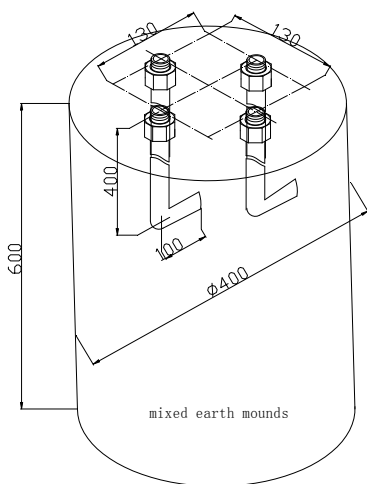


Figure1:manufacture of mixed earth mound

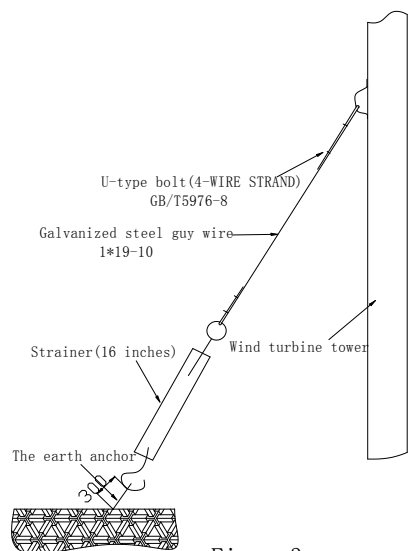


Figure3
The manufacture of guy cable

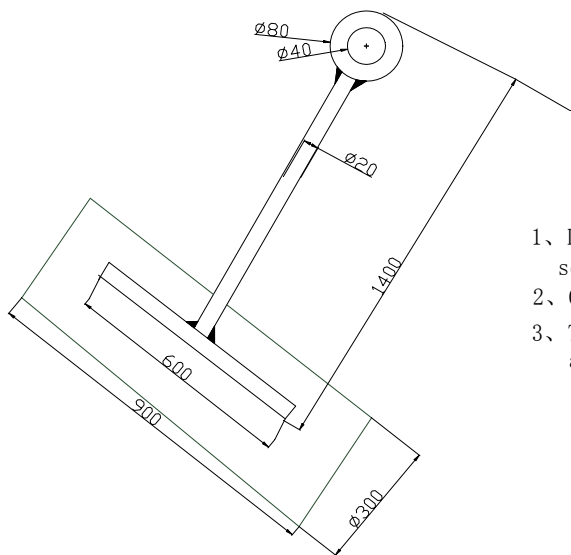


Figure2

The manufacture of earth anchor(3 sets)


Technical requirement

- 1、L-type bolts for four galvanized wire strands;
screws should be 60 higher from the mixed earth surface.
- 2、C25 motar can be used for mixed earth.
- 3、The metal parts should be under the threatment of anticorrosion and rust proofing.

Table 1 the fabrication of anchor, lasso and guy cable

4. The production style and size of the upper tower and size is shown in Figure II. Its requirement:

solid welding; no leak at the weld zone; the earth lug must be welded 20cm away from the ground. It will be connected to the lightning grounding device.

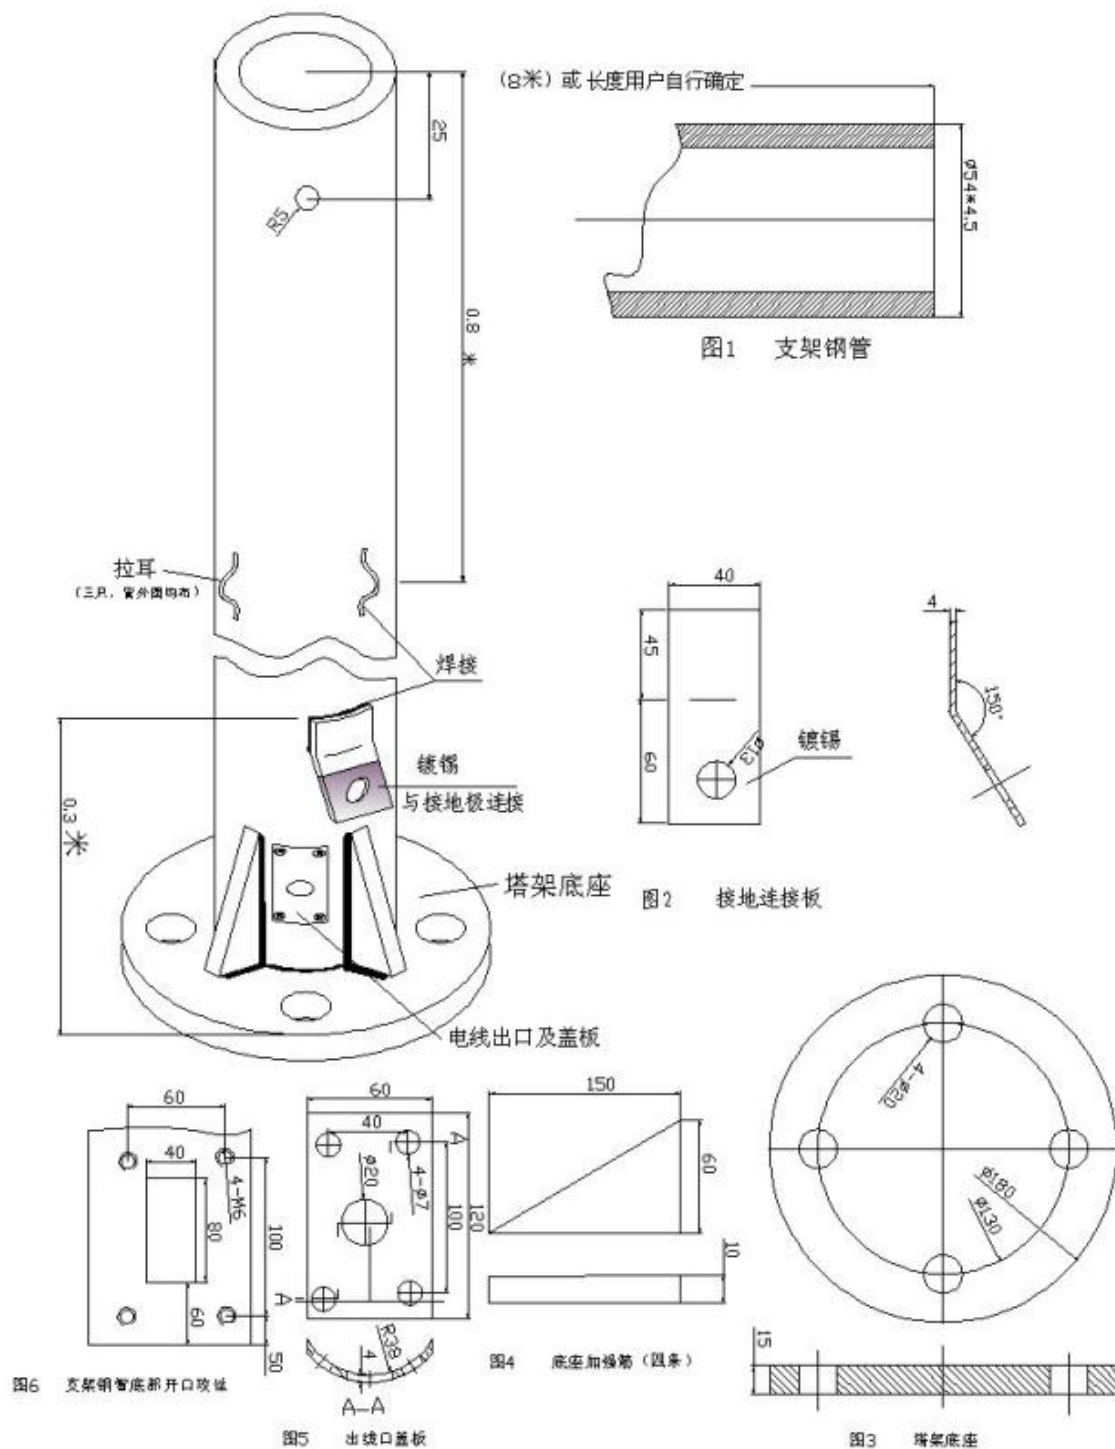

技术要求
全部防腐防锈处理

Figure 2 wind turbine flange docking in the upper tower

5. The arrangement of the lightening protection earth resistance can refer to the national standard, the European standard, and American standard. You can also refer to the figure1 on the manual to help arrange.

6. We are able to provide the towers and accessories according to the special requirements of the users.

Part 4. The Wind Turbine Installation Steps



It is prohibited to assemble and install wind turbines in rainy days.

1. The current transmission and insulated wires: transmission lines are built in the bracket iron pipe. Their upper parts can be led out through the bore of the flange joint while the bottom ones are led out from the opening which is 30cm away from the ground. The section from the bore to the point which is 60cm away from the earth surface should be protected by iron pipes whose O.D should be 17mm to 21mm. The underground paths of the transmission lines can be combined together with an iron pipe or a plastic pipe, and then be connected to the place where the controller is located.

2. The installation sequence of the wind turbines can follow the steps as illustrated in figure3.

2-1. Place the steel bracket on the ground; block up the flange joint to 1.3m.

2-2. Remove the wind turbine flange base to the flange joint. According to the seventh article in the Safety Manual, please connect the leads and transmission lines respectively.

2-3. After the flange bolt (9) is mounted on the flap gasket (10), plug it in the correspondent jacks of the flange base with the bolt's head being up. Set the bolt silk into the elastic washer and then use a spanner to tighten the nut with the flange bolts silk. Similarly, plug other bolts, flat gasket, elastic washer and nuts in the corresponding jacks. Screw down four nuts. Please refer to table 2 about the efforts needed to tighten up them.

3. The installation of the wind wheel blades: instal the diplopore of the wind wheel blades (6) onto the groove of the wind wheel hub(5). You shall match them perfectly. Otherwise, you can turn one blade back and then do the installation work. Please penetrate the stainless flange screw(13) into the pore from the front, then tighten up the anti-slack nut(14) (attention: the anti-slak nut is disposable, so it can only be screwed, but not be loosened). The operation on the other baldes is similar. Please refer to table2 about the efforts needed on them.


4. First put the big head end in the hexagonal hole of wind wheel hub, then put them into the thread spindle of the wind turbine. Press on the nut with your left hand while twist the wind wheel clockwise with your right hand. When the nut propels, use the extended hex wrench to lock the nut together with the dectral wind wheel blades.

5.The installation of the fairing: the fit between the fairing(8) and the wind wheel hub(5) belongs to the clasp. The three gaps of the fairing are for the three blades, thus use your hands to clap the

fairing pyramid so as to help them get into the seams of the wind wheel hub.

6. The lifting of the wind turbines and tower should be finished with the presence of skilled slingers and the security should be guaranteed. The tower's stance should be executed on the basis of the relevant requirement of permanent constuction.

7. After the installation of the tower and the lightning protection, use a megger of 500W to measure the resistance between the transmission lines and the earth (the lightning protection line can represent the earth) in the case of not loosening the transmission short circuiting ends. The value should not be less than $5\text{ M}\Omega$. Ohterwise, it may cause the insulating layer crushed or the joint being moisted.

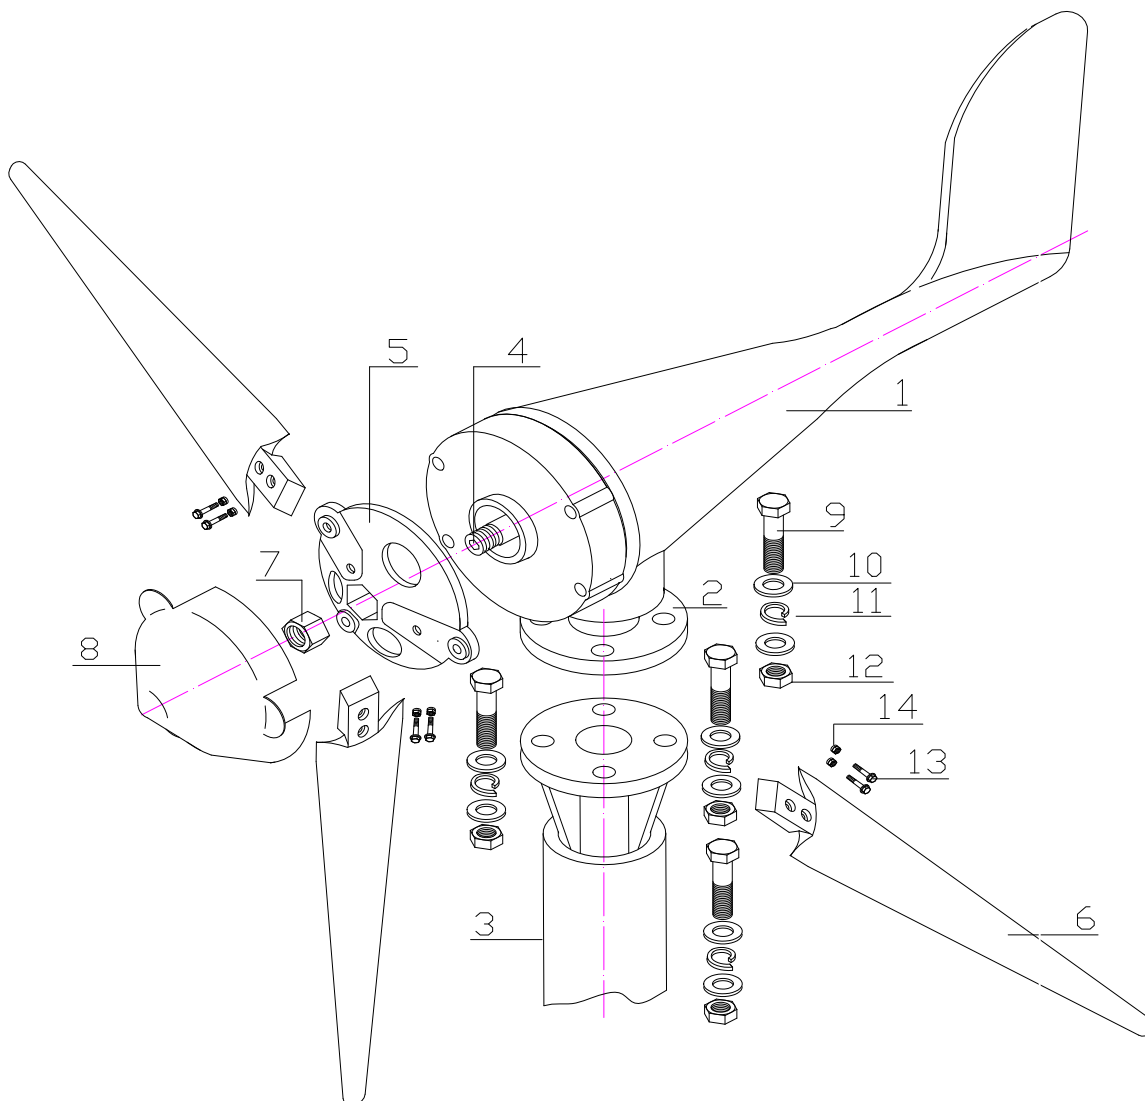

The decomposition of wind turbine

1. body frame; 2. flange base; 3. steel bracket (tower); 4. axis; 5. hub; 6. blade;
7. anti-slack nut; 8. fairing; 9. bolt; 10. flat washer; 11. elastic washer;
12. nut; 13. stainless screw; 14. anti-slack;


Figure 3 wind turbine decomposition

Part5、 The Transmission Line Connecting With Inverter.



Avoid heavy rain days for the first commissioning. Priority should be given to the days with gentle breeze of strong wind(wind speed: 5~13m/s).

1. Please correctly connect the positive and negative poles of the storage battery to the ones of the binding posts(solar cell binding posts for spare use) on the controller(exclusive for wind turbines).
2. The load circuit is connected to the plug seat on the back of the controller through the fuse, switch and the plug.
3. The three transmission lines of wind turbine are connected to the three terminal (hole) on the back of the controller. As for the connection theory, you can refer to the relevant manual of the dedicated controller for wind generators, wind solar hybrid streetlight controller and the dedicated inverter for wind solar generators.
4. The D.C. voltmeter, being equipped with the inverter, indicates the storage battery's voltage while the charging current shows the storage battery's charging current. The alternating output voltmeter indicates the output voltage of the day. The red switch takes charge of the AV output. That is to say, the break of AC output will not influence the charging of the wind generator to storage battery. There are many indicating lamps with different colors on the central panel of the inverter 's frontage. They indicate the working condition when the inverter has different functions and give warnings when the inverter deviates the normal operation condition.
5. Usually it is suggested to choose the fixed type lead-acid storage battery with cheap price. For instance, you can choose 100AH storage battery for the 200w wind generator, 400~600AH for 500w. The span of charging voltage is totally controlled by the inverter. The wind generators adopt the float-filling system to charge the storage battery. As for the float-filling current, it is related to the degree of depreciation, depth of discharge and maintenance. Usually, after the initial charge or the deep discharge, the beginning value will not be less than 8A per 100AH. With the time going, it may reduce to 3~1A. After it charges up, it can reach to 50~100MA or so.
6. The inverter should be put in dry and draughty places so as to resist the humid air and dust. Please make sure that the inverter's jacket is connected to the earth and over 1.5m away from the storage battery.
7. In order to maintain its charge and discharge capacity as well as the life expectancy, the storage battery should be installed in such places where they are dry, cool and ventilated in summer and warm in winter.

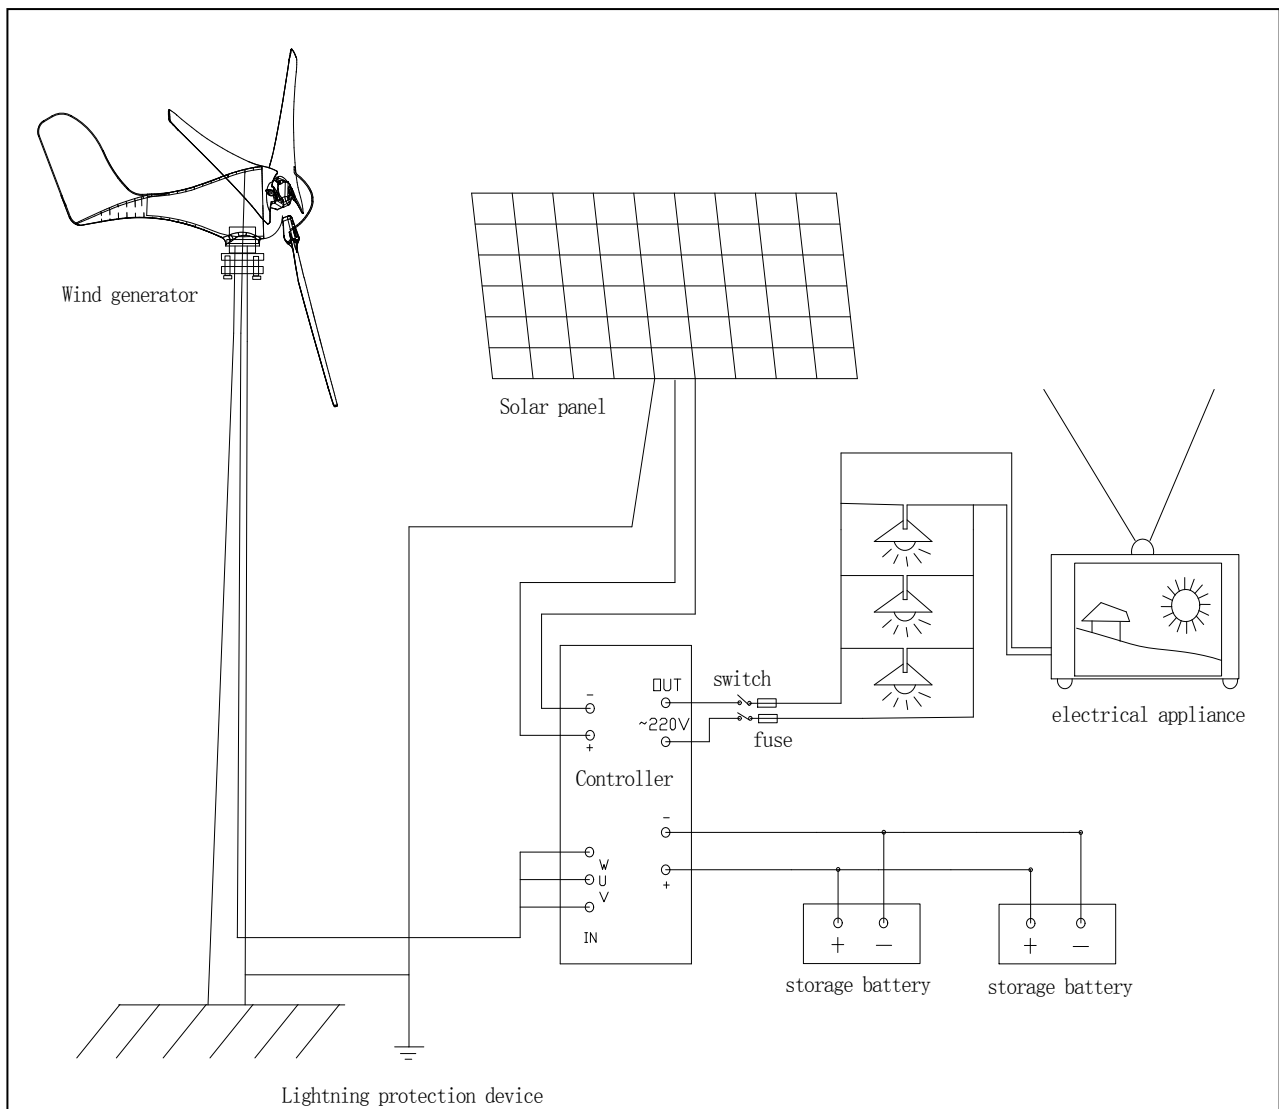

Connection diagram of wind turbine, solar panel and electrical appliance

Part6. Maintenance and Precautions

1. Wind generators often work at poor environment, thus please make sure you have time to check them with your sight and hearing; check whether the tower is swaying or whether the cable is loose (using a telescope is also a good idea).
2. Timely inspection should be made after a heavy storm. If there is any problem, please put down the tower slowly for maintenance. With regard to the wind turbines for streetlights, there should be electrician climbing the pole to check if there is any problem when the security protection measures are prepared.
3. The free maintenance batteries should be kept clear.
4. Do not disassemble the equipment by yourself. Please contact the specified maintenance department when the equipment is out of order.

Part 7. Packing list

number	name	Unit	quantity	Note
1	Motor	set	1	
2	hub	pcs	1	
3	blades	pcs	3	
4	stainless steel against pine nuts (M6*40)	pcs	1	
5	flange connecting bolts (M12*55)	pcs	4	
6	nuts (M12)	pcs	4	
7	stainless steel bolts (M6*40)	pcs	6	
8	stainless steel against pine nuts (M6*40)	pcs	6	
9	flat gasket	pcs	8	
10	elastic gasket	pcs	4	
11	stainless steel bolts (M6*40)	pcs	1	spare parts
12	stainless steel against pine nuts (M6*40)	pcs	2	spare parts
13	L-type wrench	pcs	1	tool
14	Hex wrench	pcs	1	tool
15	Controller/Inverter	set	1	A customer optional
16	Tower	set	1	A customer optional
Accessories:				

Quality Guarantee

1. To ensure quality, Our company products will go through strict examination before leaving the factory. Therefore we promise to customers that the generators are in excellent quality and complete.
2. Our products have a year's warranty since the day they are bought. In regard to the failure of the products because of one's repack or without authorization a year's guarantee, We don't keep the maintenance, occurred in the following situation:Dismantle and repair it by yourself or seriously violate compasses operation (not according to instructions use)
- 3, The documents were as a product Warranty certificate, please properly preserved.

User information table:

Sales company:	Purchase company:
Purchase time:	Contact person:
SBBH:	Contact:
Model:	Zip code:

Maintenance records:

Date	Maintenance species	Summary	SMT rework