


DESPIECE SPAREPARTS


**GENERADOR INVERTER:
HY3400SEi**

MOTOR: GK160E-VI


07/10/23

HYUNDAI
POWER PRODUCTS

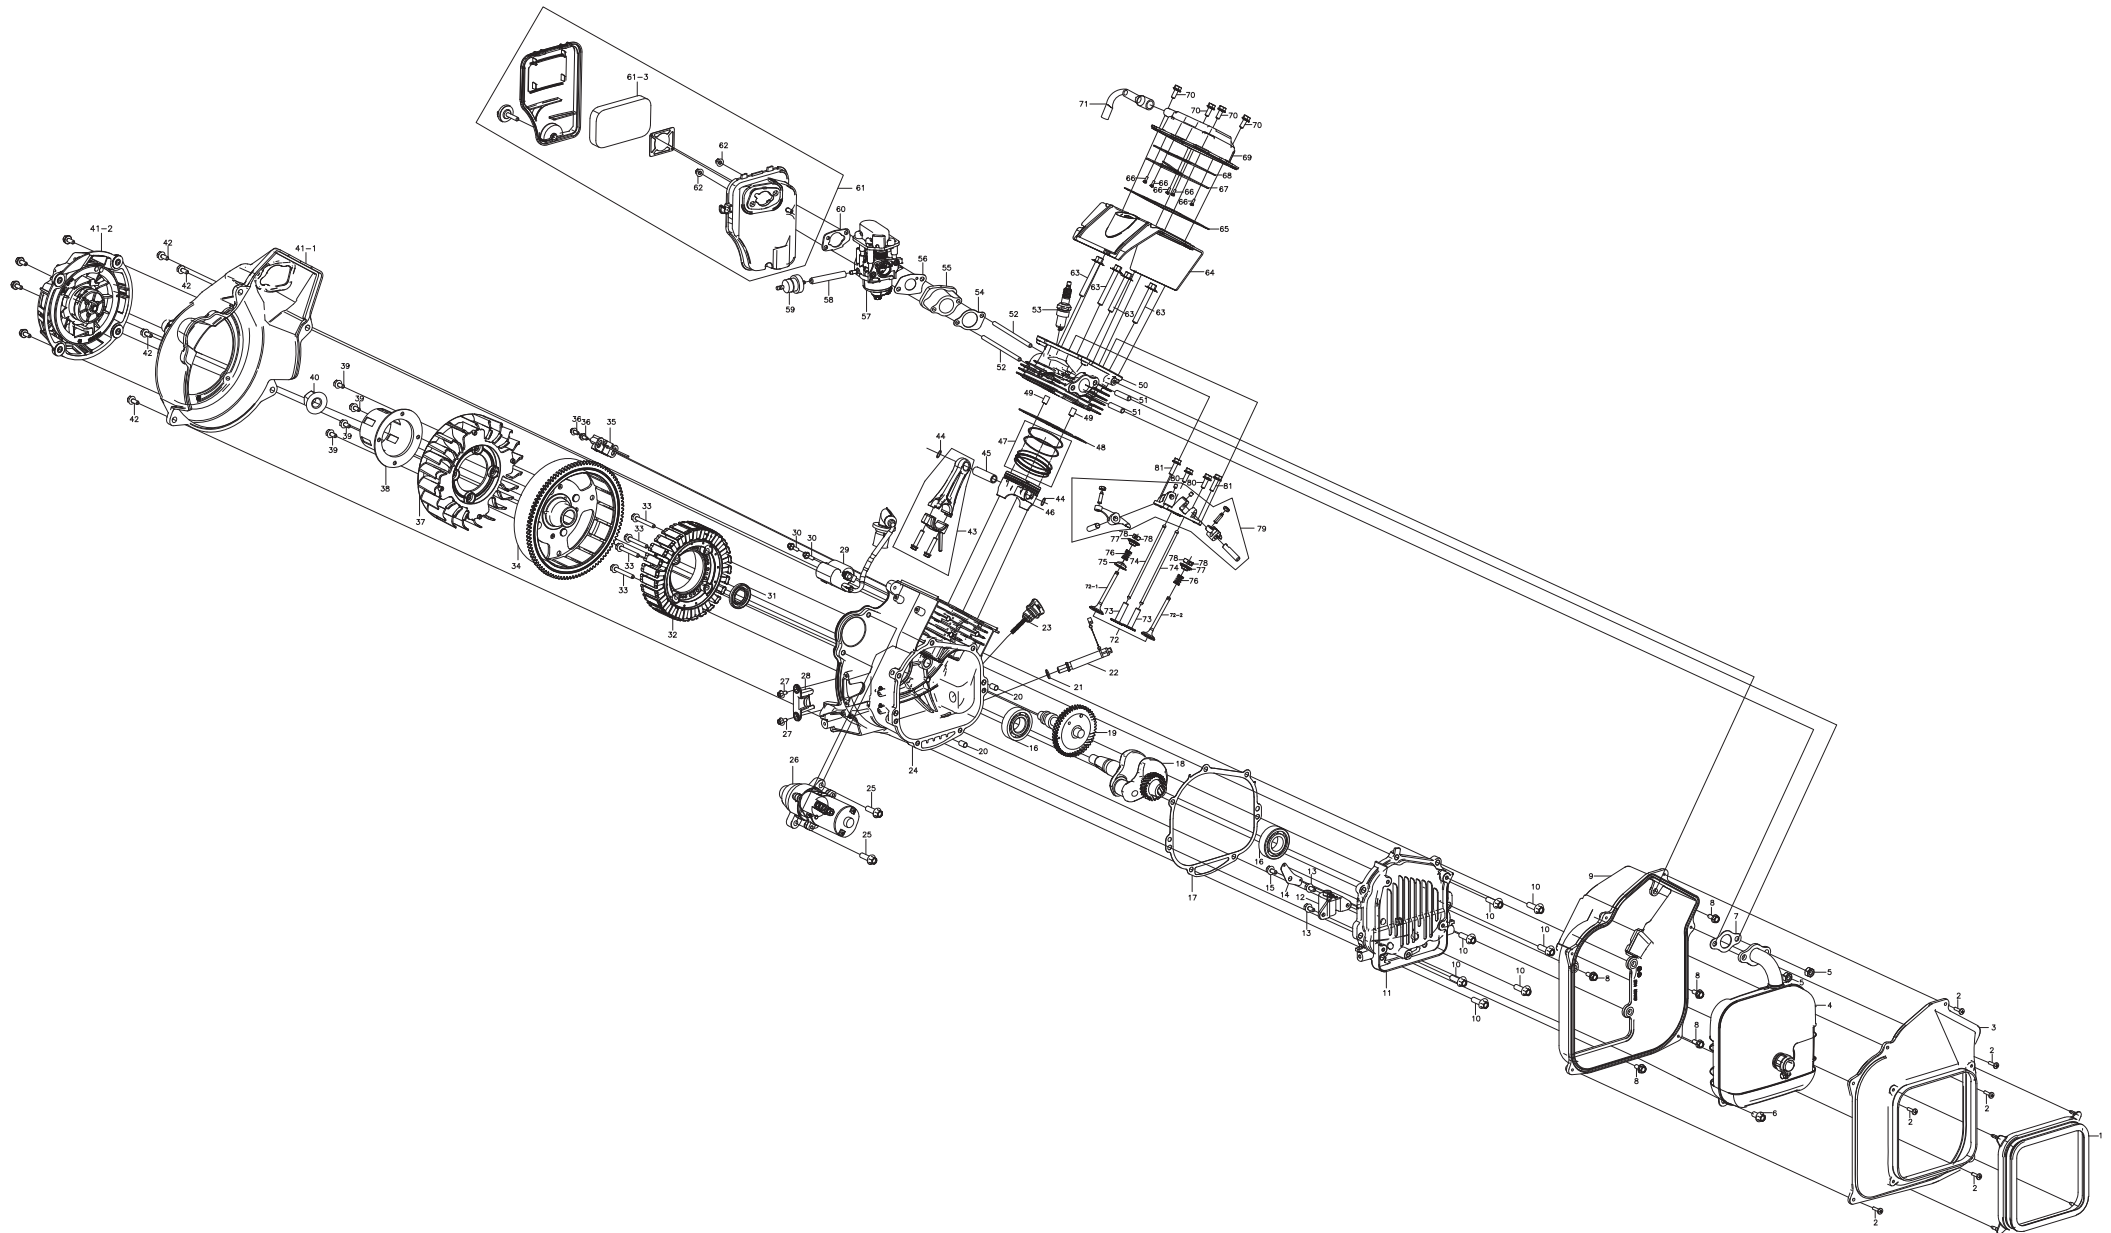


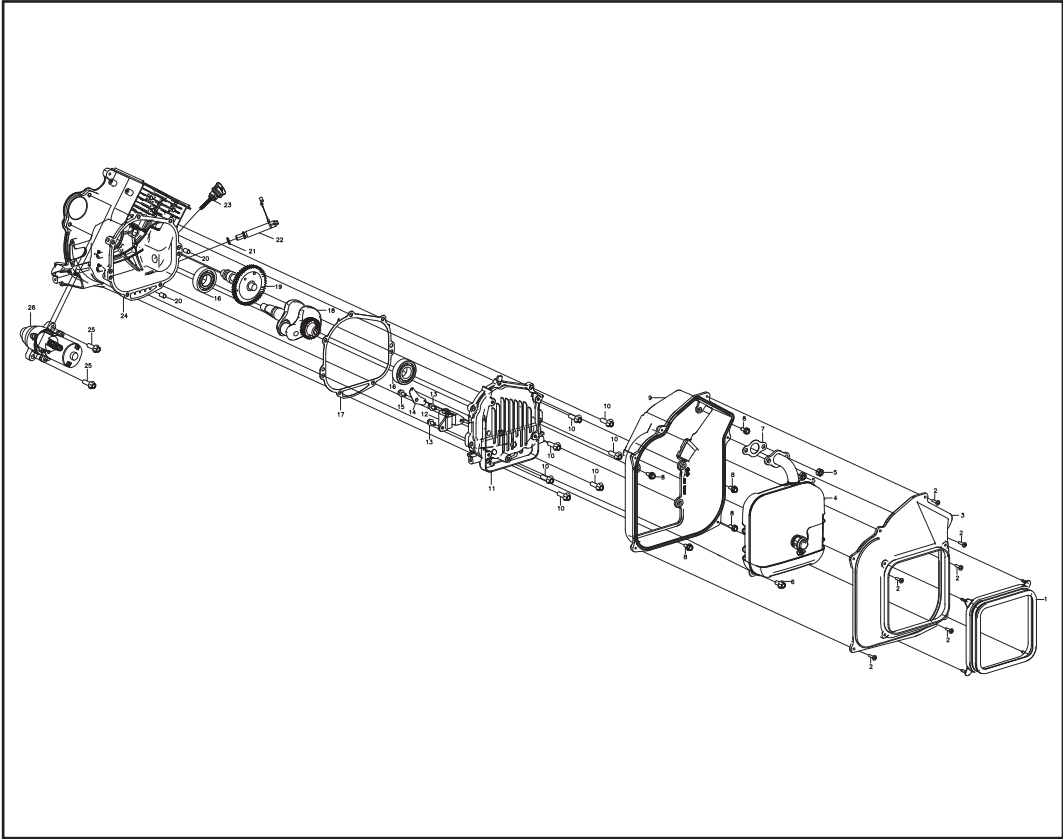


Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-GK160-01	JUNTA CARCASA ESCAPE	GASKET COVER
2	SP-GK160-02	TORNILLO	CROSS GROOVE PAN SCREW
3	SP-GK160-03	CARCASA EXTERIOR ESCAPE	WIND GUIDE HOOD
4	SP-GK160-04	ESCAPE	MUFFLER ASSY
5	SP-GK160-05	TUERCA	NUT
6	SP-GK160-06	TORNILLO M8X16	FLANGE BOLT M8X16
7	SP-GK160-07	JUNTA ESCAPE	EXHAUST OUTLET GASKET
8	SP-GK160-08	TORNILLO M6X16	FLANGE BOLT M6X16
9	SP-GK160-09	CARCASA INTERIOR ESCAPE	MUFFLER INSULATION PLATE
10	SP-GK160-10	TORNILLO M8X25	FLANGE BOLT M8X25
11	SP-GK160-11	TAPA BLOQUE MOTOR	CRANKCASE COVER
12	SP-GK160-12	SENSOR NIVEL ACEITE	ENGINE OIL SENSOR
13	SP-GK160-13	TORNILLO M6X12	FLANGE BOLT M6X12
14	SP-GK160-14	PLACA	CLAMP
15	SP-GK160-15	TORNILLO M6X12	FLANGE BOLT M6X12
16	SP-GK160-16	COJINETE	BEARING
17	SP-GK160-17	JUNTA TAPA BLOQUE MOTOR	CRANKCASE GASKET
18	SP-GK160-18	CIGÜEÑAL	CRANKSHAFT ASSY
19	SP-GK160-19	ARBOL DE LEVAS	CAMSHAFT ASSY
20	SP-GK160-20	PASADOR	PIN
21	SP-GK160-21	JUNTA DRENAJE	FLAT WASHER
22	SP-GK160-22	TUBO DRENAJE	DRAIN PIPE
23	SP-GK160-23	VARILLA NIVEL ACEITE	ENGINE OIL PLUG SUBASSEMBLY
24	SP-GK160-24	BLOQUE MOTOR	CRANKCASE
25	SP-GK160-25	TORNILLO	FLANGE BOLT M8X30
26	SP-GK160-26	MOTOR ARRANQUE	STARTING MOTOR

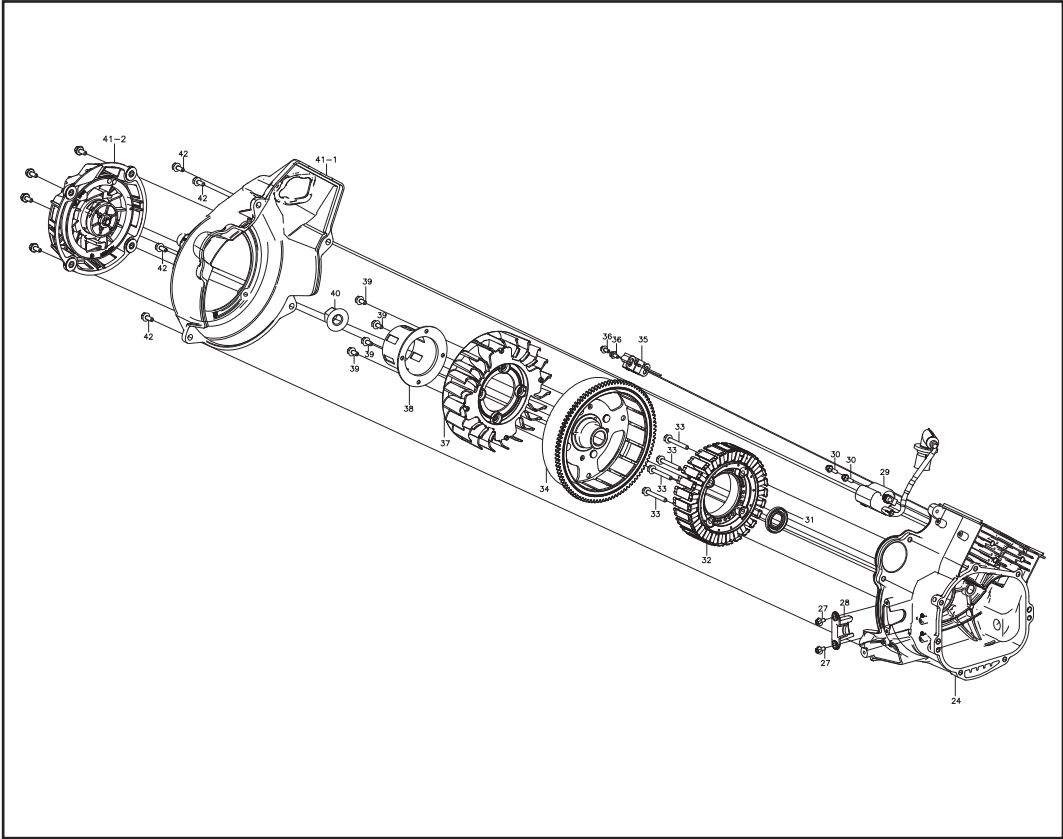


Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
24	SP-GK160-24	BLOQUE MOTOR	CRANKCASE
27	SP-GK160-27	TORNILLO M5X12	FLANGE BOLT M5X12
28	SP-GK160-28	TAPA	PLATE COVER
29	SP-GK160-29	BOBINA BUJIA	IGNITION COIL
30	SP-GK160-30	TORNILLO M5X16	FLANGE BOLT M5X16
31	SP-GK160-31	RETEN	OIL-SEAL
32	SP-GK160-32	ESTATOR	MAGNETO STATOR
33	SP-GK160-33	TORNILLO M6X45	FLANGE BOLT M6X45
34	SP-GK160-34	ROTOR	MAGNETO ROTOR
35	SP-GK160-35	SENSOR REVOLUCIONES	REVOLUTION SENSOR
36	SP-GK160-36	TORNILLO M5X12	FLANGE BOLT M5X12
37	SP-GK160-37	VENTILADOR	FAN
38	SP-GK160-38	ACOPLE ARRANCADOR	START CUP
39	SP-GK160-39	TORNILLO M6X12	FLANGE BOLT M6X12
40	SP-GK160-40	TUERCA VOLANTE INERCIA	FLYWHEEL NUT
41-1	SP-GK160-41-1	CUBIERTA ARRANCADOR	DIVERSION COVER
41-2	SP-GK160-41-2	ARRANCADOR MANUAL	RECOIL STARTER ASSY
42	SP-GK160-42	TORNILLO M6X20	FLANGE BOLT M6X20

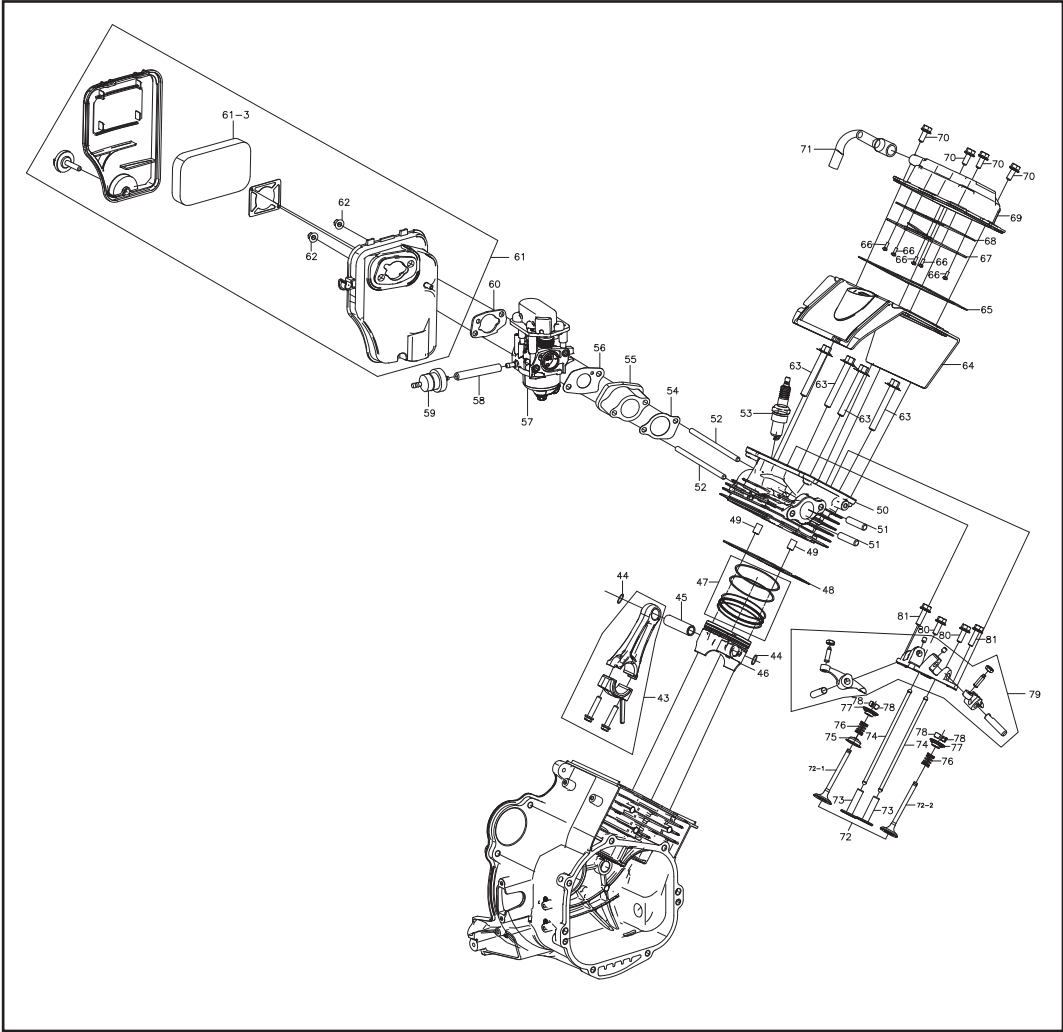

Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
43	SP-GK160-43	BIELA PISTON	CONNECTING ROD
44	SP-GK160-44	CLIP SUJECION BURLON	PISTON PIN CLIP
45	SP-GK160-45	BURLON PISTON	PISTON PIN
46	SP-GK160-46	PISTON	PISTON
47	SP-GK160-47	JUEGO SEGMENTOS	PISTON RING ASSY
48	SP-GK160-48	JUNTA CULATA	CYLINDER HEAD GASKET
49	SP-GK160-49	PASADOR	PIN
50	SP-GK160-50	CULATA	CYLINDER HEAD
51	SP-GK160-51	ESPARRAGO ESCAPE	EXHAUST STUD
52	SP-GK160-52	ESPARRAGO CARBURADOR	INTAKE STUD
53	SP-BUJIA-F7RTC	BUJIA TORCH F7RTC	SPARK PULG TORCH F7RTC
54	SP-GK160-54	JUNTA ADMISION	CARBURETOR GASKET
55	SP-GK160-55	PLACA AISLANTE	CARBURETOR INSULATOR PLATE
56	SP-GK160-56	JUNTA CARBURADOR	CARBURETOR INSULATOR GASKET
57	SP-GK160-57	CARBURADOR	CARBURETOR ASSY
58	SP-GK160-58	TUBO COMBUSTIBLE	FUEL PIPE
59	SP-3200i-116	FILTRO COMBUSTIBLE EXTERNO	FUEL FILTER
60	SP-GK160-60	JUNTA FILTRO AIRE	AIR CLEANER GASKET
61	SP-GK160-61	FILTRO AIRE COMPLETO	AIR CLEANER
61-3	SP-GK160-61-3	ELEMENTO FILTRANTE	AIR CLEANER ELEMENT
62	SP-GK160-62	TUERCA	NUT
63	SP-GK160-63	TORNILLO	CYLINDER HEAD BOLT
64	SP-GK160-64	DEFLECTOR AIRE	CYLINDER HEAD AIR DEFLECTOR
65	SP-GK160-65	JUNTA TAPA VALVULAS	CYLINDER HEAD COVER GASKET
66	SP-GK160-66	TORNILLO	SCREW
67	SP-GK160-67	RESPIRADERO	BREATH PIECE
68	SP-GK160-68	JUNTA RESPIRADERO	BREATH GROOVE GASKET
69	SP-GK160-69	TAPA VALVULAS	CYLINDER HEAD COVER
70	SP-GK160-70	TORNILLO M6X16	FLANGE BOLT M6X16
71	SP-GK160-71	TUBO RESPIRADERO	BREATHER TUBE
72	SP-GK160-72	JUEGO VALVULAS	VALVE SET
72-1	SP-GK160-72-1	VALVULA ADMISION	INTAKE VALVE
72-2	SP-GK160-72-2	VALVULA ESCAPE	EXHAUST VALVE
73	SP-GK160-73	ASIENTO VARILLAS	VALVE TAPPET
74	SP-GK160-74	VARILLAS EMPUJE	VALVE LIFTER
75	SP-GK160-75	RETEN VALVULA	VALVE STEM SEAL
76	SP-GK160-76	MUELLE VALVULA	VALVE SPRING
77	SP-GK160-77	ASIENTO MUELLE VALVULA	VALVE SPRING SEAT
78	SP-GK160-78	TOPE VALVULA	VALVE LOCK CLAMP
79	SP-GK160-79	JUEGO BALANCIENES	VALVE ROCKER SUBASSEMBLY
80	SP-GK160-80	TORNILLO M6X20	FLANGE BOLT M6X20
81	SP-GK160-81	TORNILLO M6X16	FLANGE BOLT M6X16

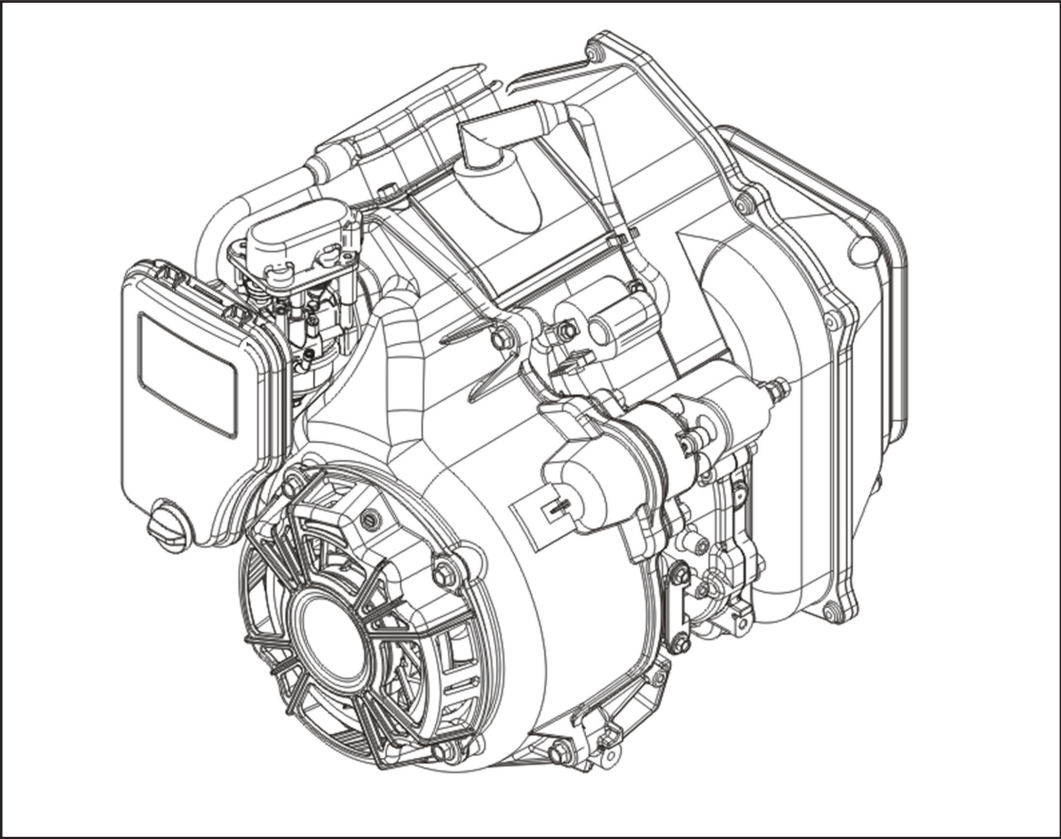



Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	HY-GK160E-VI	MOTOR GK160E-VI	ENGINE GK160E-VI

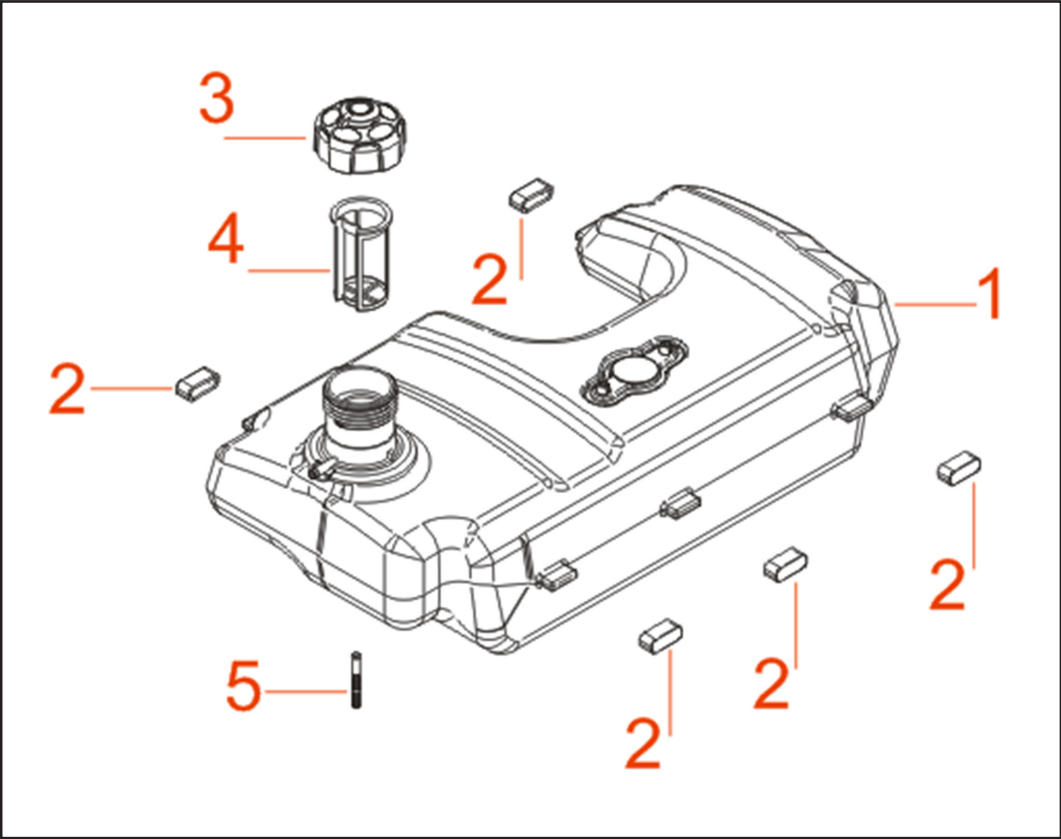


Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-3500i-B01	DEPOSITO COMBUSTIBLE	FUEL TANK
2	SP-3500i-B02	GOMAS DEPOSITO	FUEL TANK RUBBER PAD
3	SP-3500i-B03	TAPON DEPOSITO	FUEL TANK CAP
4	SP-3500i-B04	PRE FILTRO COMBUSTIBLE	FUEL FILTER
5	SP-3500i-B05	FILTRO COMBUSTIBLE	FILTER ELEMENT

Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-3500i-C01	CUBIERTA ESCAPE	MUFFLER SIDE COVER
2	SP-3500i-C02	TORNILLO	NON-STANDARD BOLT
3	SP-3500i-C03	TUERCA	CLIP NUT

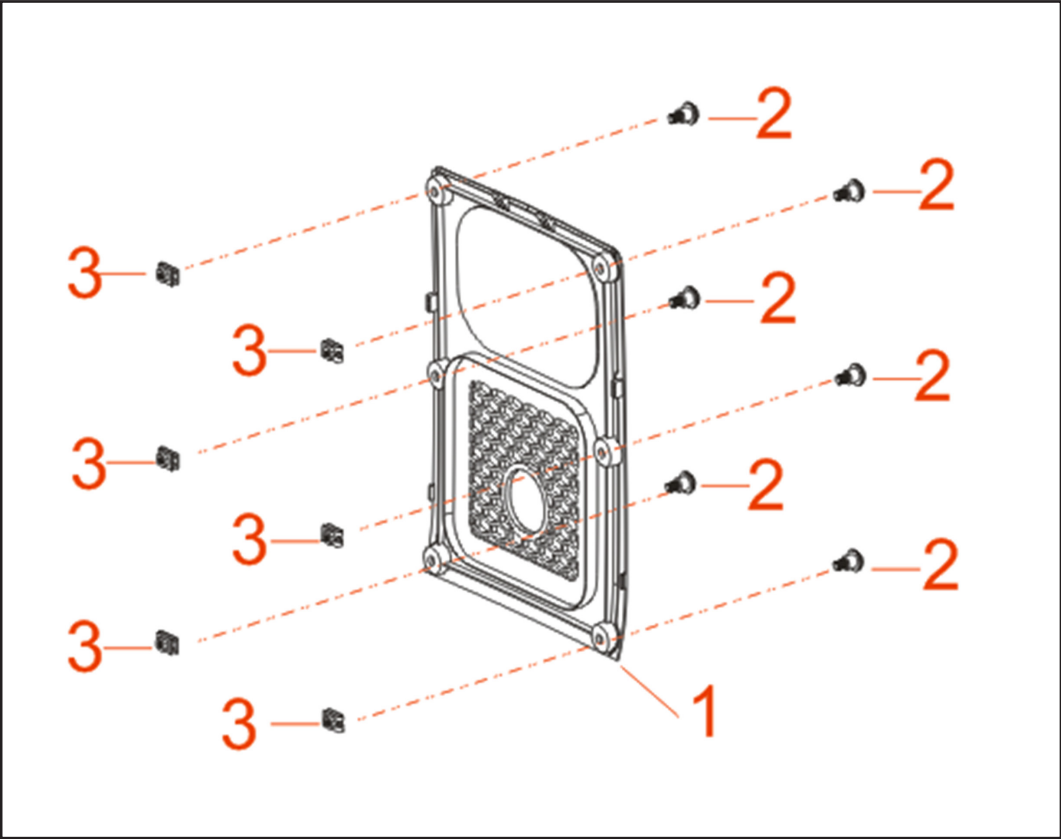


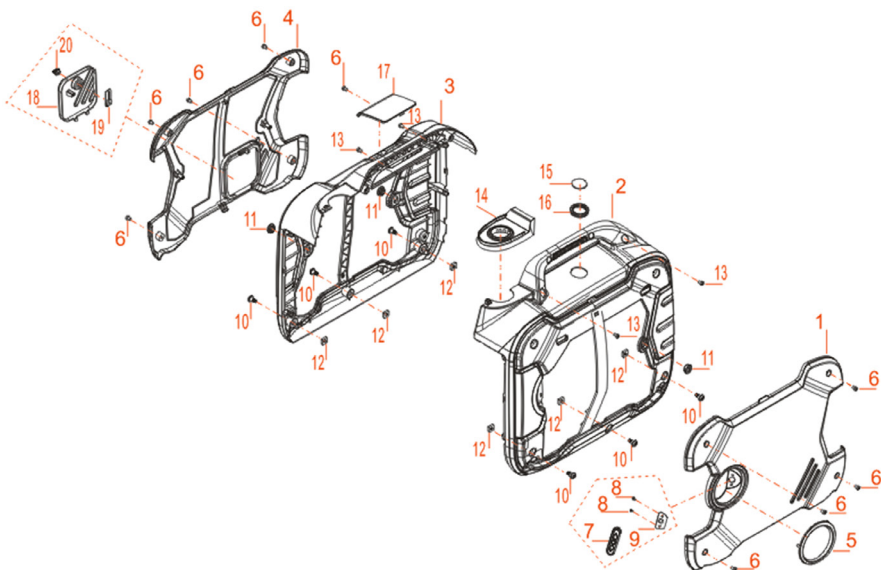

Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-3500i-D01-IT	TAPA DERECHA AMARILLA	YELLOW RIGHT EXTERIOR COVER
2	SP-3500i-D02	CARCASA DERECHA	RIGHT SHELL
3	SP-3500i-D03	CARCASA IZQUIERDA	LEFT SHELL
4	SP-3500i-D04-IT	TAPA IZQUIERDA AMARILLA	YELLOW LEFT EXTERIOR COVER
5	SP-3500i-D05	EMBELLECEDOR CIRCULAR	LEFT TRIM CIRCLE
6	SP-3500i-D06	TORNILLO	BOLT
7	SP-3500i-D07	TORNILLO	CROSS GROOVED DISC HEAD SCREW
8	SP-3500i-D08	TORNILLO	BOLT
9	SP-3500i-D09	GUIA CUERDA ARRANCADOR	STARTING ROPE GUIDE PLATE
10	SP-3500i-D10	TORNILLO	NON-STANDARD BOLT
11	SP-3500i-D11	CASQUILLO DE GOMA	OIL INJECTION NOZZLE RUBBER SLEEVE
12	SP-3500i-D12	TUERCA	NUT
13	SP-3500i-D13	TORNILLO	NON-STANDARD BOLT
14	SP-3500i-D14	GOMA DEPOSITO COMBUSTIBLE	FUEL TANK SUPPORT RUBBER SLEEVE
15	SP-3500i-D15	CRISTAL NIVEL COMBUSTIBLE	FUEL-MARKED GLASS WINDOW
16	SP-3500i-D16	JUNTA DE GOMA	RUBBER SHEATH
17	SP-3500i-D17	TAPA SUPERIOR	TOP COVER
18	SP-3500i-D18-IT	TAPA MANTENIMIENTO AMARILLA	YELLOW MAINTENANCE WINDOW COVER
19	SP-3500i-D19	SEPARADOR	LIMIT BLOCK
20	SP-3500i-D20	TUERCA PALOMILLA	BUTTON

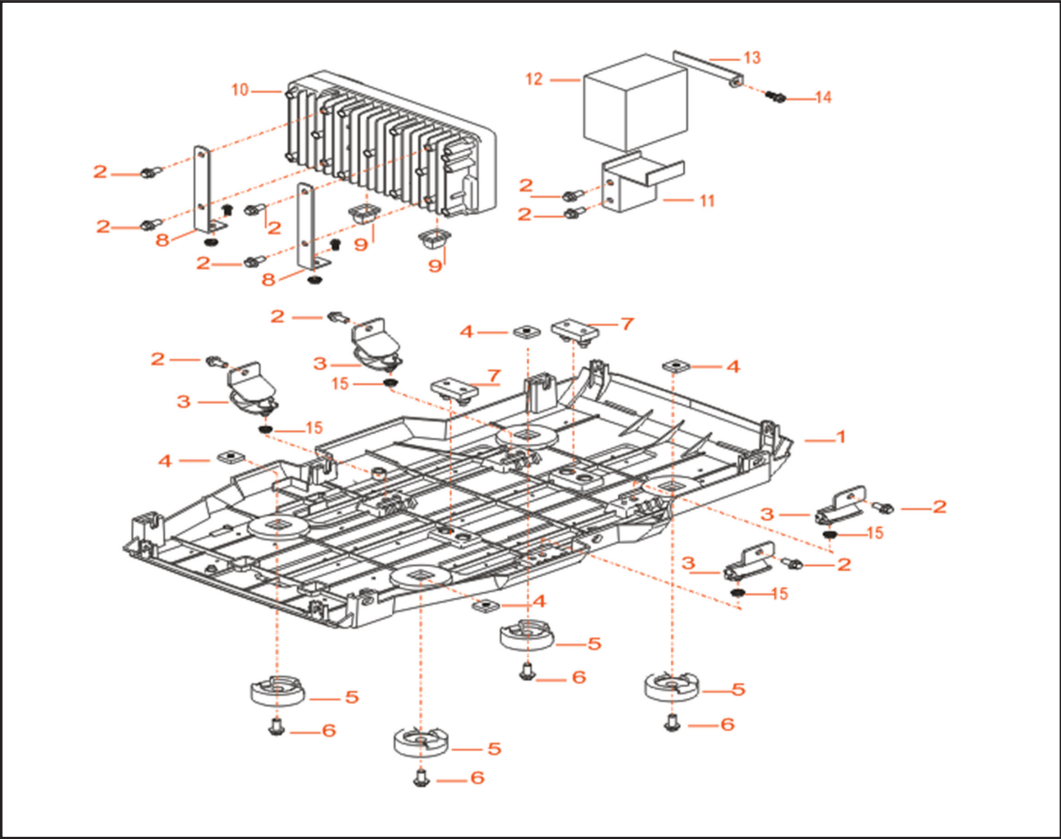

Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-3500i-E01	BASE	BASE
2	SP-3500i-E02	TORNILLO	BOLT
3	SP-3500i-E03	ASIENTO CARCASA	FRAME SEAT
4	SP-3500i-E04	TUERCA	NUT
5	SP-3500i-E05	PIE DE GOMA	VIBRATION ABSORBER
6	SP-3500i-E06	TORNILLO	BOLT
7	SP-3500i-E07	SOPORTE AMORTIGUADOR	BUFFER CUSHION SUPPORT
8	SP-3500i-E08	SOPORTE PLACA INVERTER	INVERTER MOUNTING FRAME
9	SP-3500i-E09	GOMAS SUJECION	RUBBER SHEATH
10	SP-3500i-E10	PLACA INVERTER	INVERTER
11	SP-3500i-E11	SOPORTE BATERIA	BATTERY SUPPORTER
12	SP-BAT-3AH-12V	BATERIA DE LITIO 12V 3Ah	12V 3Ah LITHIUM BATTERY
12-1	SP-BAT-4AH-12V-H	BATERIA ACIDO 12V 4AH	12V 4AH ACID BATTERY
13	SP-3500i-E13	FIJACION BATERIA	PRESSING BLOCK (BATTERY)
14	SP-3500i-E14	TORNILLO & ARANDELA	SCREW & WASHER
15	SP-3500i-E15	TUERCA	NUT

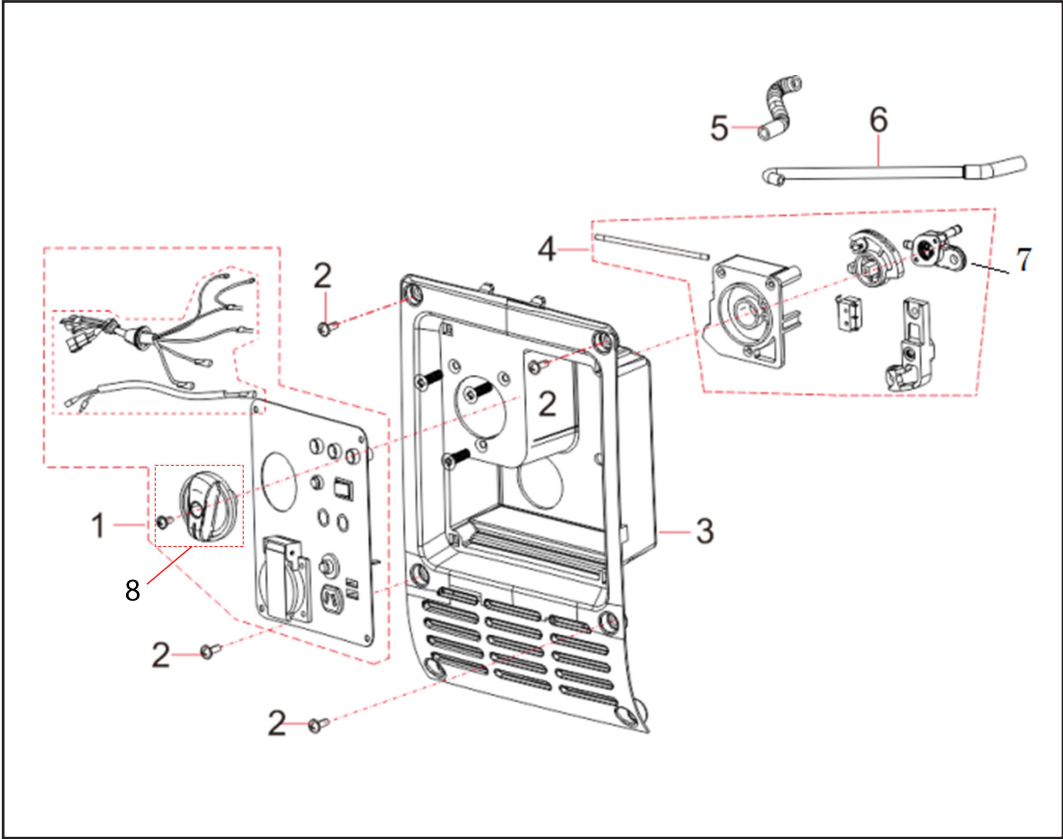

Nº	REF.	DESCRIPCIÓN (ES)	DESCRIPTION (EN)
1	SP-3500i-F01	PANEL CONTROL COMPLETO	PANEL ASSY
2	SP-3500i-F02	TORNILLO & ARANDELA	SCREW & WASHER
3	SP-3500i-F03	CAJA PANEL CONTROL	PANEL SEAT
4	SP-3500i-F04	CONJ. GRIFO E INTERRUPTOR DE ARRANQUE	SWITCH ASSY
5	SP-3500i-F05	TUBO COMBUSTIBLE A	FUEL TUBE A
6	SP-3500i-F06	TUBO COMBUSTIBLE B	FUEL TUBE B
7	SP-3500i-F07	GRIFO COMBUSTIBLE	FUEL SWITCH PARTS
8	SP-3500i-F08	BOTON ON / OFF	ON / OFF BUTTON