


Current Sensor Installation (optional)

To enable monitoring of the input current and hours remaining function, the optional current sensor should be fitted as below:

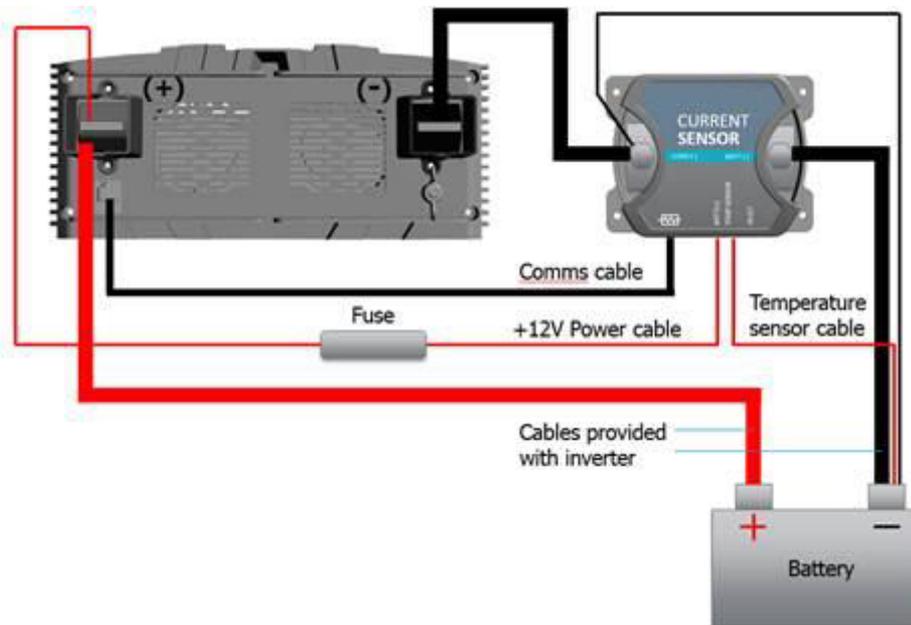

1. Using black battery cable supplied with inverter, attach one end to battery(-) terminal
And other end to batt(-) terminal on Current Sensor
2. Using red battery cable supplied with inverter, attach one end to battery(+) terminal
And other end to inverter (+) terminal
3. Using black cable supplied with current sensor, attach one to inverter(-) terminal and other
End to load(-) terminal on Current Sensor
4. Connect +12V power cable from batt(+) on Current Sensor to inverter(+) terminal
5. Connect data cable between comms port on inverter and current sensor
6. Connect data cable between Temperature sensor port on batt(-) and current sensor
7. Follow instruction for powering and testing the inverter